

## INDEX

MODEL	SALES DESIGNATION
123.123 .....	240 D

CIRCUIT	PAGE	CIRCUIT	PAGE
Air Conditioning .....	124	Lights (continued)	
Automatic Antenna .....	130	—Headlights .....	110
Auxiliary Fan .....	125	—Instrument Cluster .....	120
Charging System .....	108	—License .....	113
Cigar Lighter .....	130	—Marker .....	113
Clock .....	121	—Park .....	112
Cruise Control .....	114	—Stop .....	114
Exhaust Gas Recirculation .....	109	—Tail .....	112
Fuse Information .....	102	—Turn Signal .....	118
Gauges .....	120	—Trunk .....	113
Ground Distribution .....	132	Power Distribution .....	104
Heated Seats .....	131	Power Windows .....	128
Heater .....	124	Pre-Glow System .....	106
Horns .....	127	Radio .....	130
Lights		Rear Defogger .....	126
—Backup .....	111	RH Outside Mirror .....	135
—Center Console .....	116	Sliding Roof .....	127
—Courtesy .....	119	Start/Stop (Ignition Switch) .....	107
—Fog Lights .....	110	Transmission Kickdown .....	111
—Glove Box .....	111	Warning Indicators .....	120
—Hazard .....	118	Warning System .....	122
		Wiper/Washer .....	123


## FUSE-CIRCUIT LIST

Fuse		Circuits Protected	Page
No.	Amps (Color)		
1	8(WT)	Center Console Illumination Lights: Park/Tail (RH) Lights: Marker/License Warning Indicators/ Instrument Cluster Illumination Warning System	116 112 113 120 122
2	8(WT)	Automatic Antenna Clock Courtesy Lights Hazard Lights Radio Trunk Light Warning System	130 120 119 118 130 113 122
3	8(WT)	Lights: Park/Tail (LH)	112
4	8(WT) 16(PK)*	Cigar Lighter Glove Box Light Radio RH Outside Mirror *With Heated Seats (Front)	130 113 130 135
5		Not Used	
6	16(PK)	Headlights (Flash) Wiper/Washer	110 123
7	8(WT)	Headlights (RH High Beam)	110
8	16(PK)	Air Conditioning Heater	124 124
9	8(WT)	Headlights (LH High Beam/Indicator)	110
10	16(PK) 25(BU)*	Rear Defogger *With Heated Seats (Rear)	126 131

Fuse		Circuits Protected	Page
No.	Amps (Color)		
11	16(PK)	Fog Lights Headlights (RH Low Beam)	110 110
12	8(WT)	Cruise control Gauges Power Windows Stoplights Turn Signal Lights Warning Indicators	114 120 128 114 118 120
13	8(WT)	Headlights (LH Low Beam)	110
14	8(WT)	Backup Lights/Transmission Kickdown Exhaust Gas Recirculation Horns Warning System Auxiliary Fan	111 109 127 122 125
a	16(PK)	Power Windows (RF/LR)	128
b	16(PK)	Power Windows (LF/RR)	128
c	16(PK)	Auxiliary Fan	125
d	16(PK)	Sliding Roof	127
Radio In-Line Fuse	2(GLASS)	Radio (Part of Europa Cassette Radio)	130
	80	Power Input (Europa Cassette only)	106

REVISIONS:


## FUSE BOX

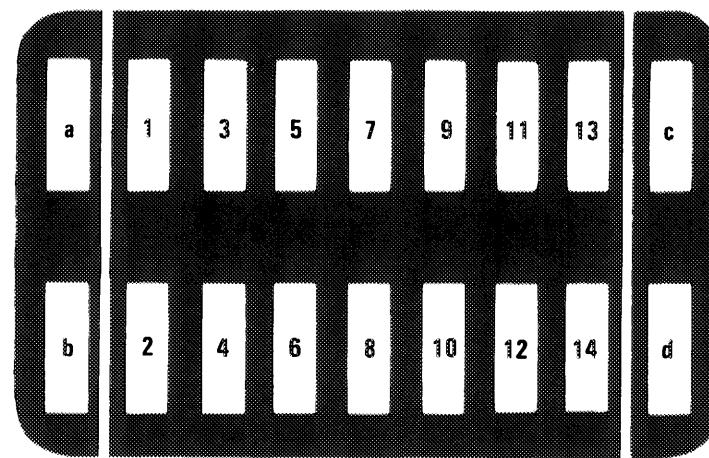

123.123

RELAY CODE	RELAY USE
10	Window Relay
12	A/C Relay
6	Auxiliary Fan Relay


123.123

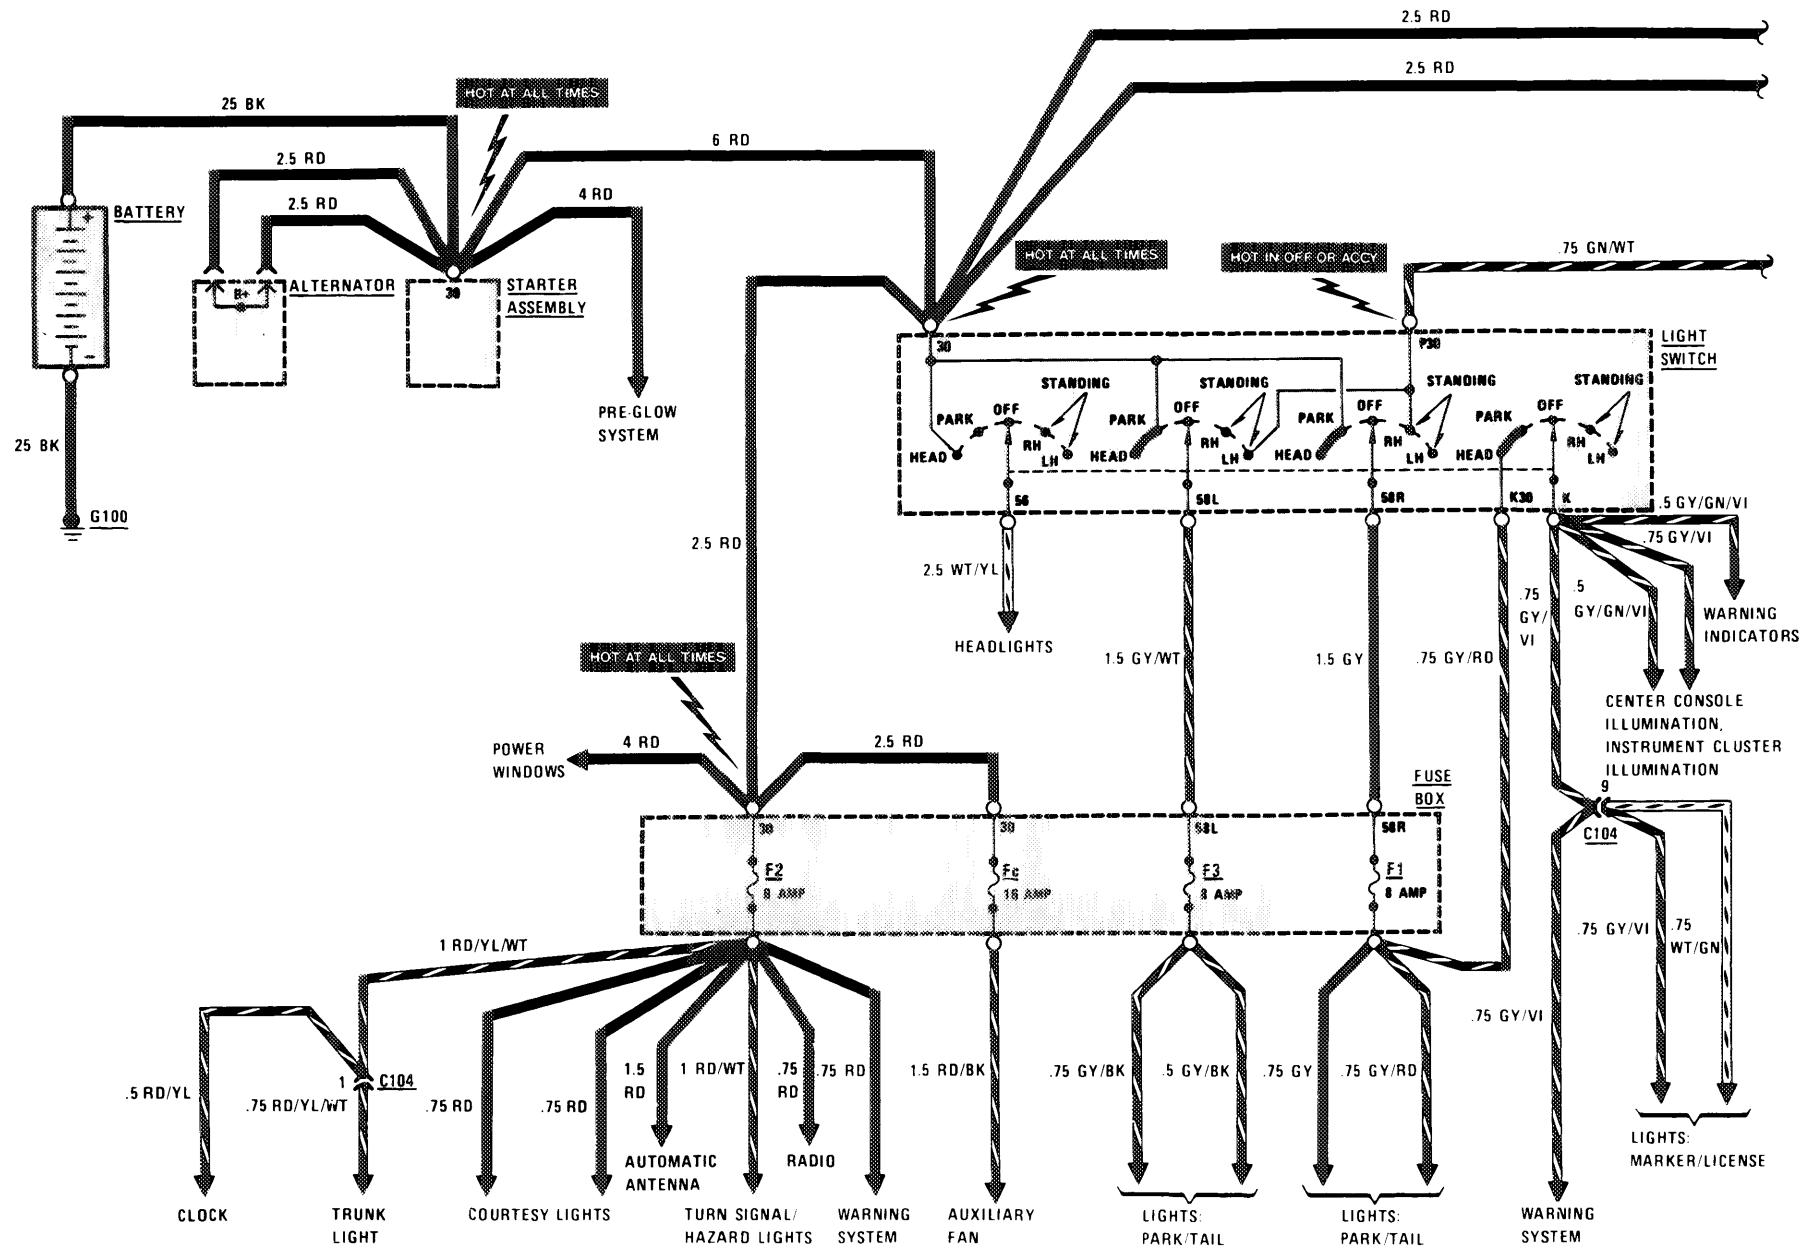

## REVISIONS:


## POWER DISTRIBUTION

(For Component Locations See Page 204)

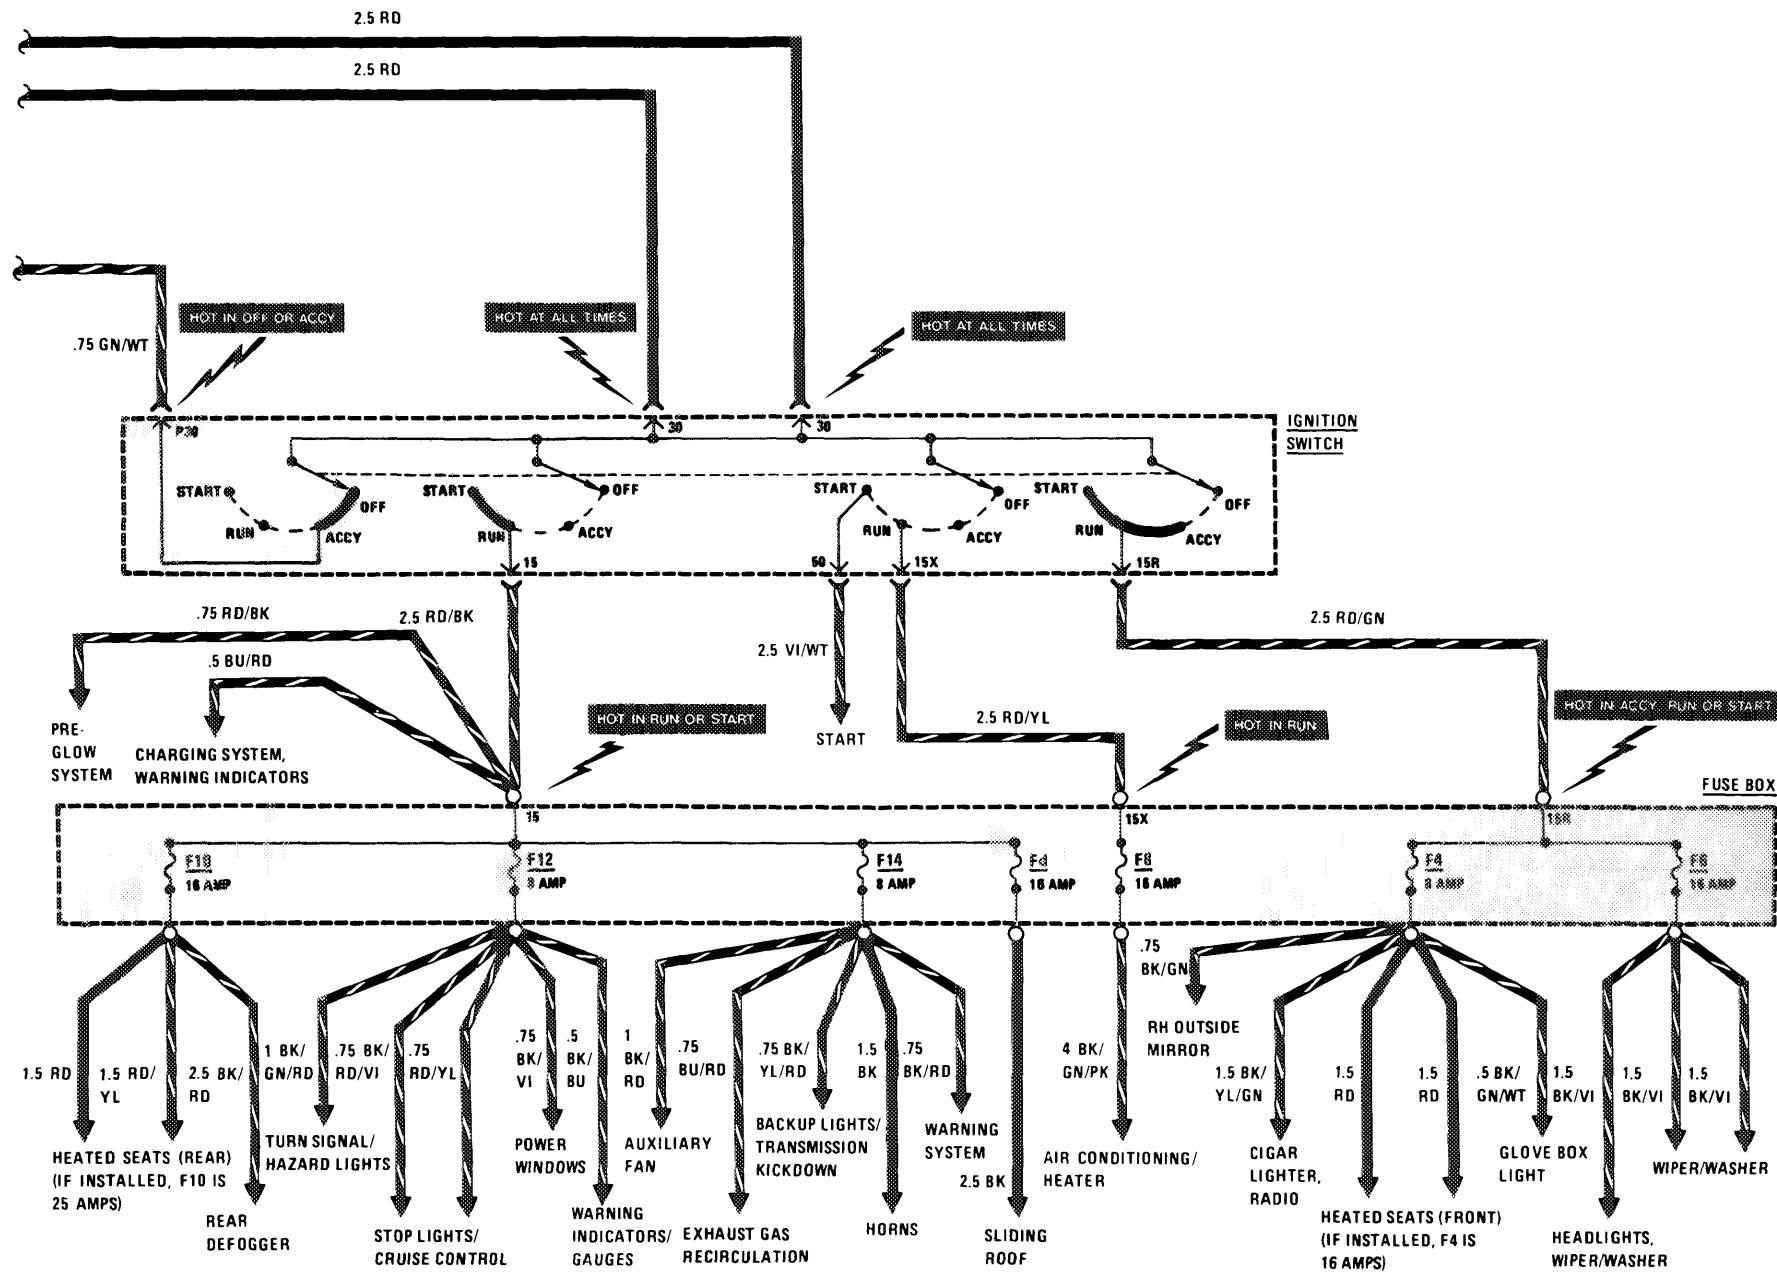


REVISIONS:

123.123

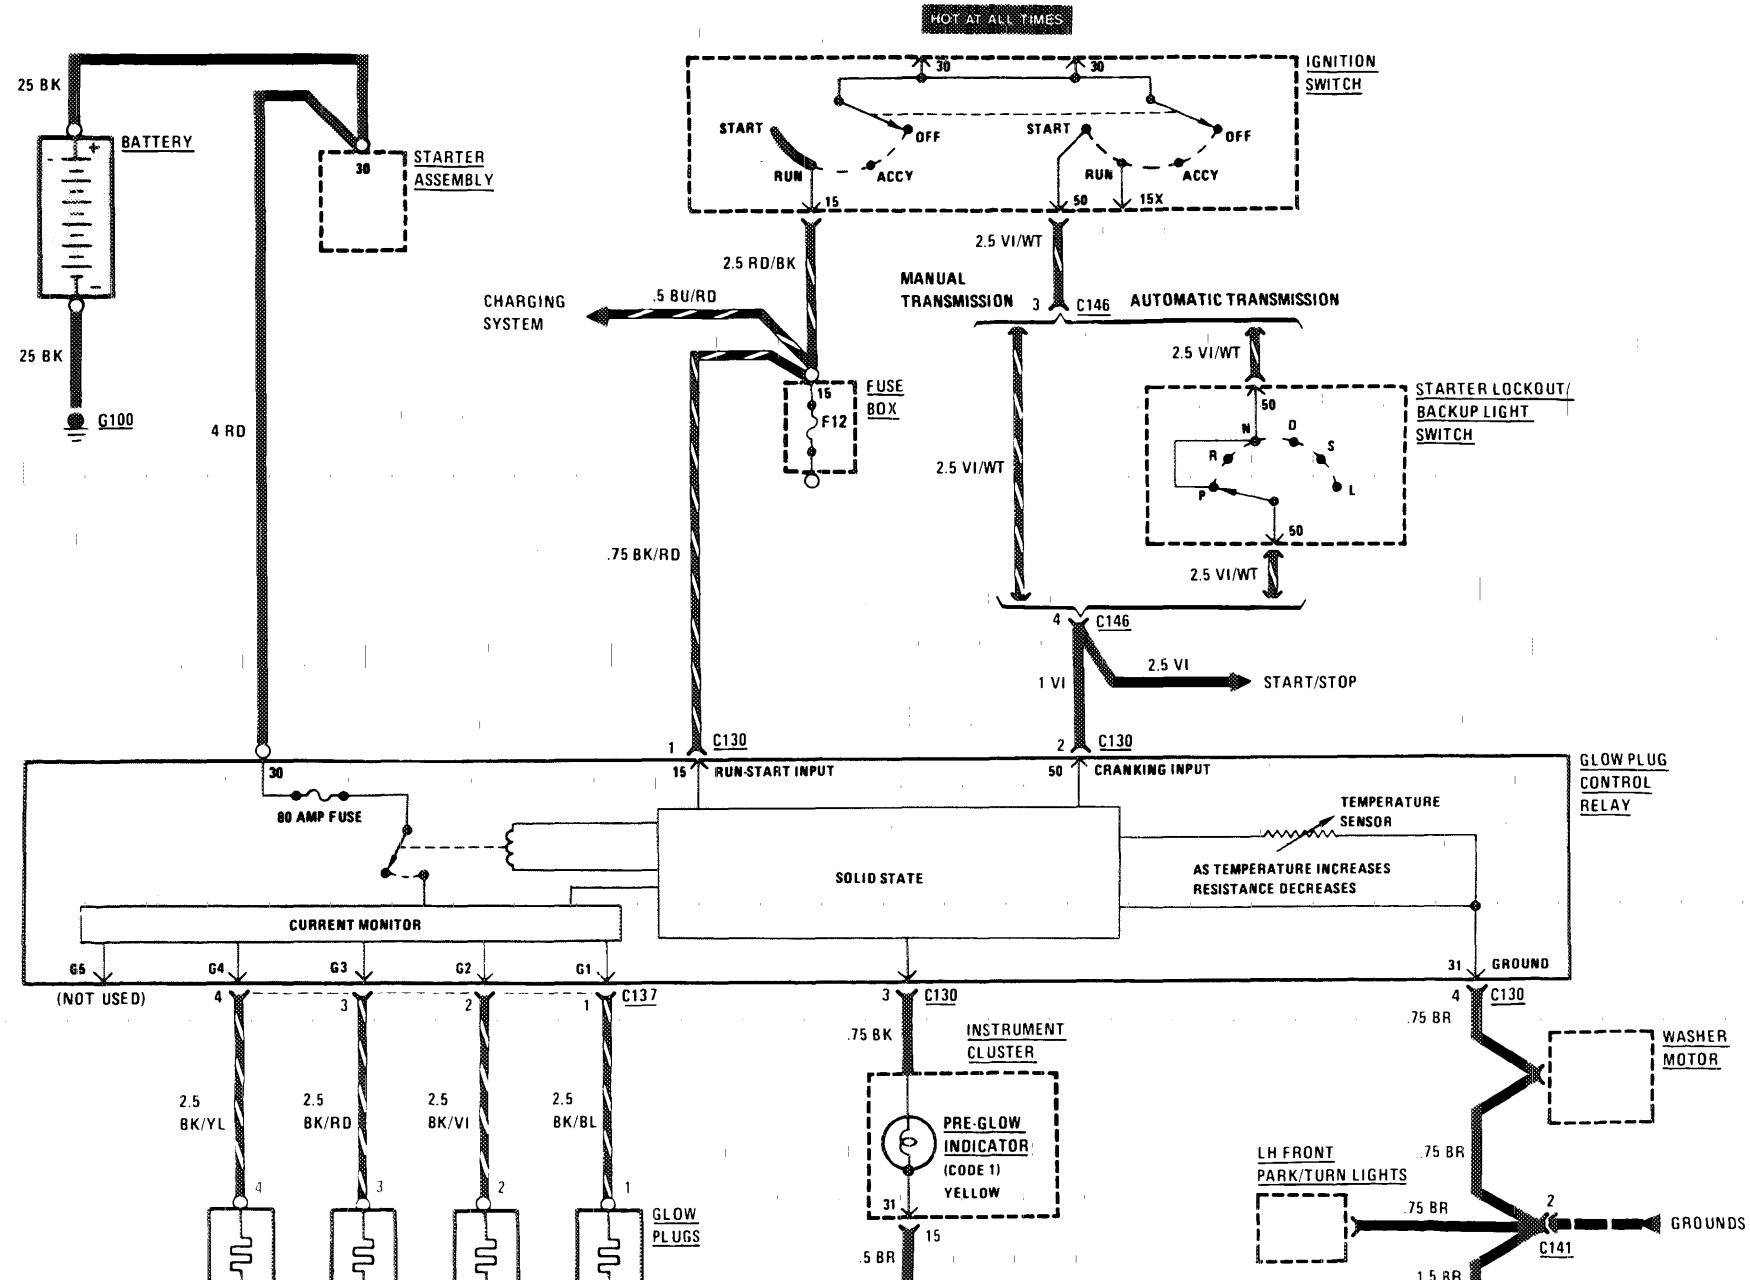


## START/STOP (IGNITION SWITCH)

(For Component Locations See Page 205)

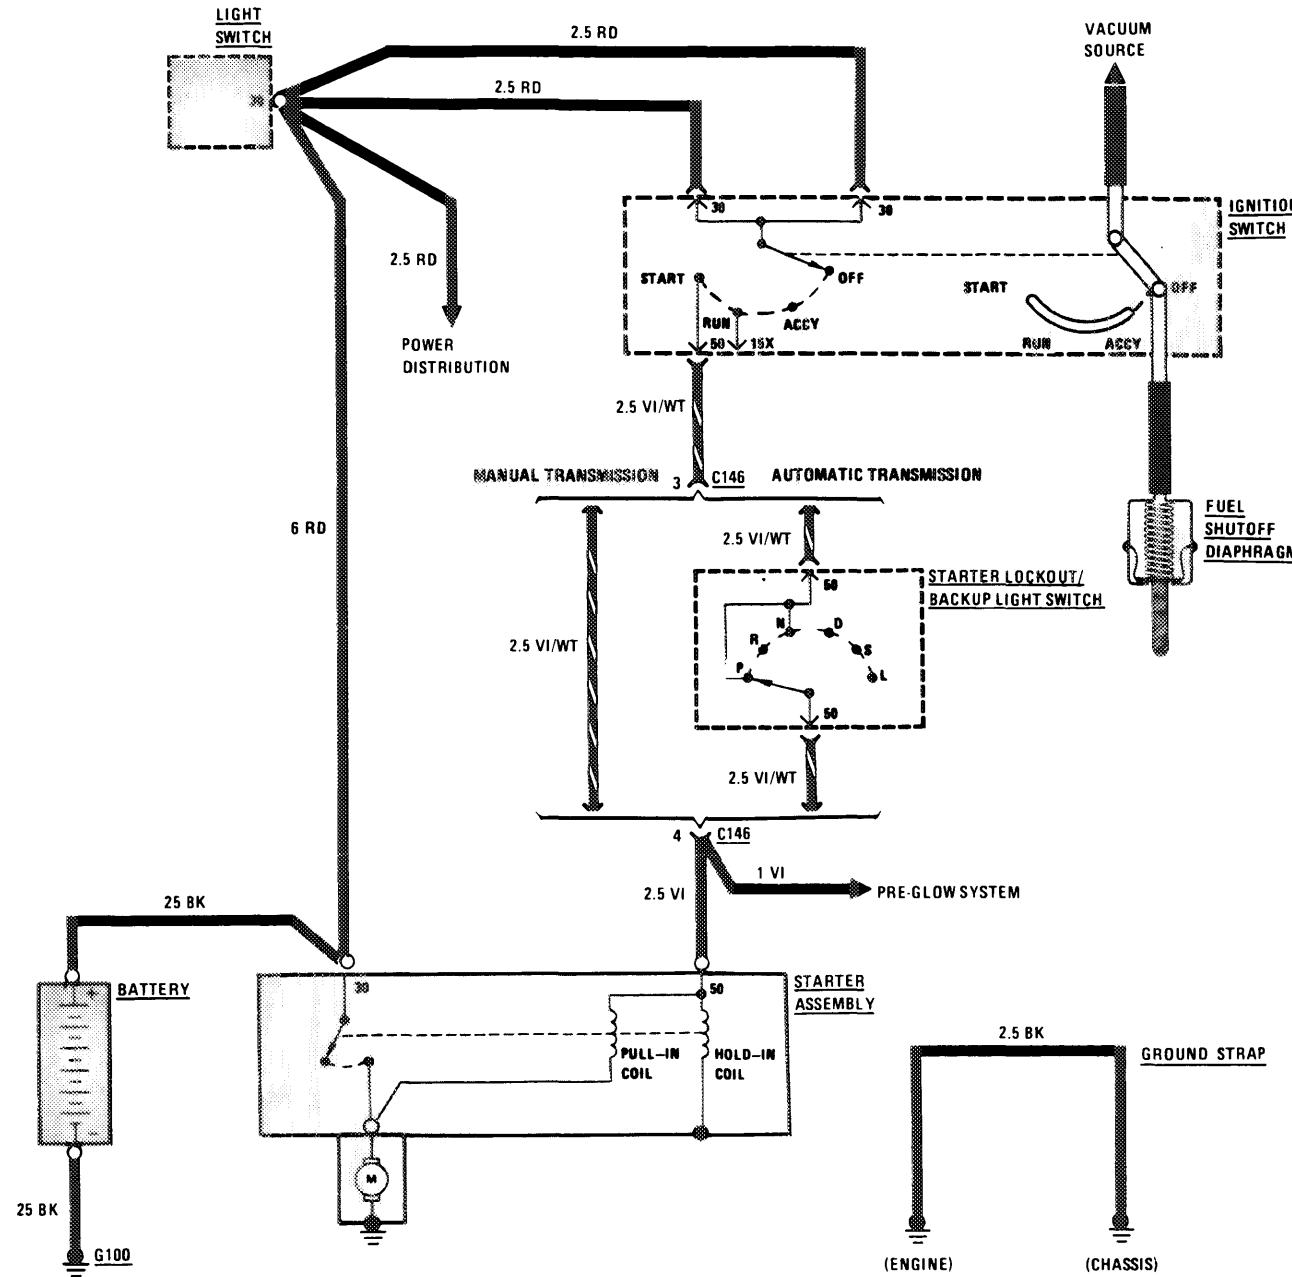


## **CHARGING SYSTEM**

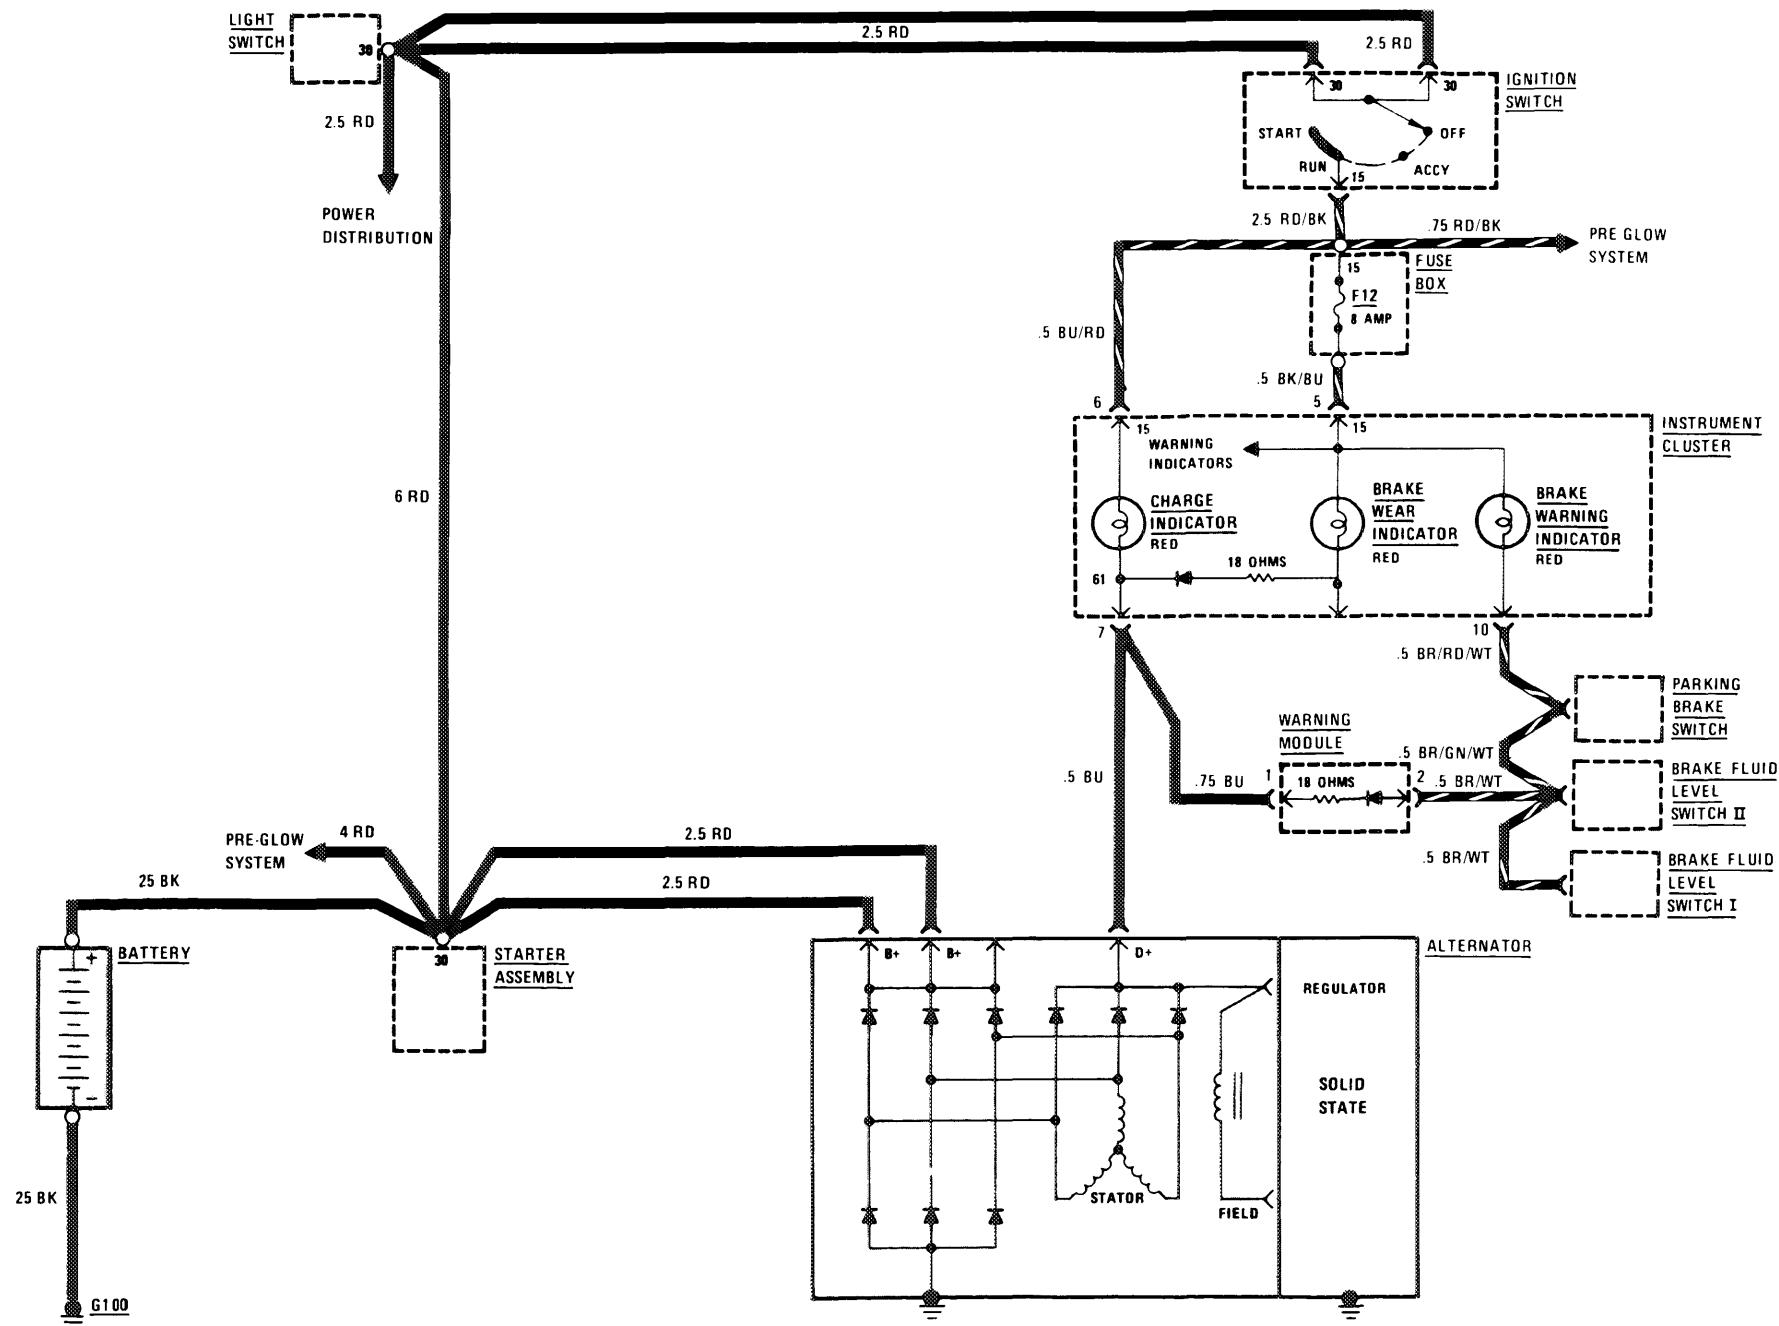

**REVISIONS:**


## EXHAUST GAS RECIRCULATION

(For Component Locations See Page 202)

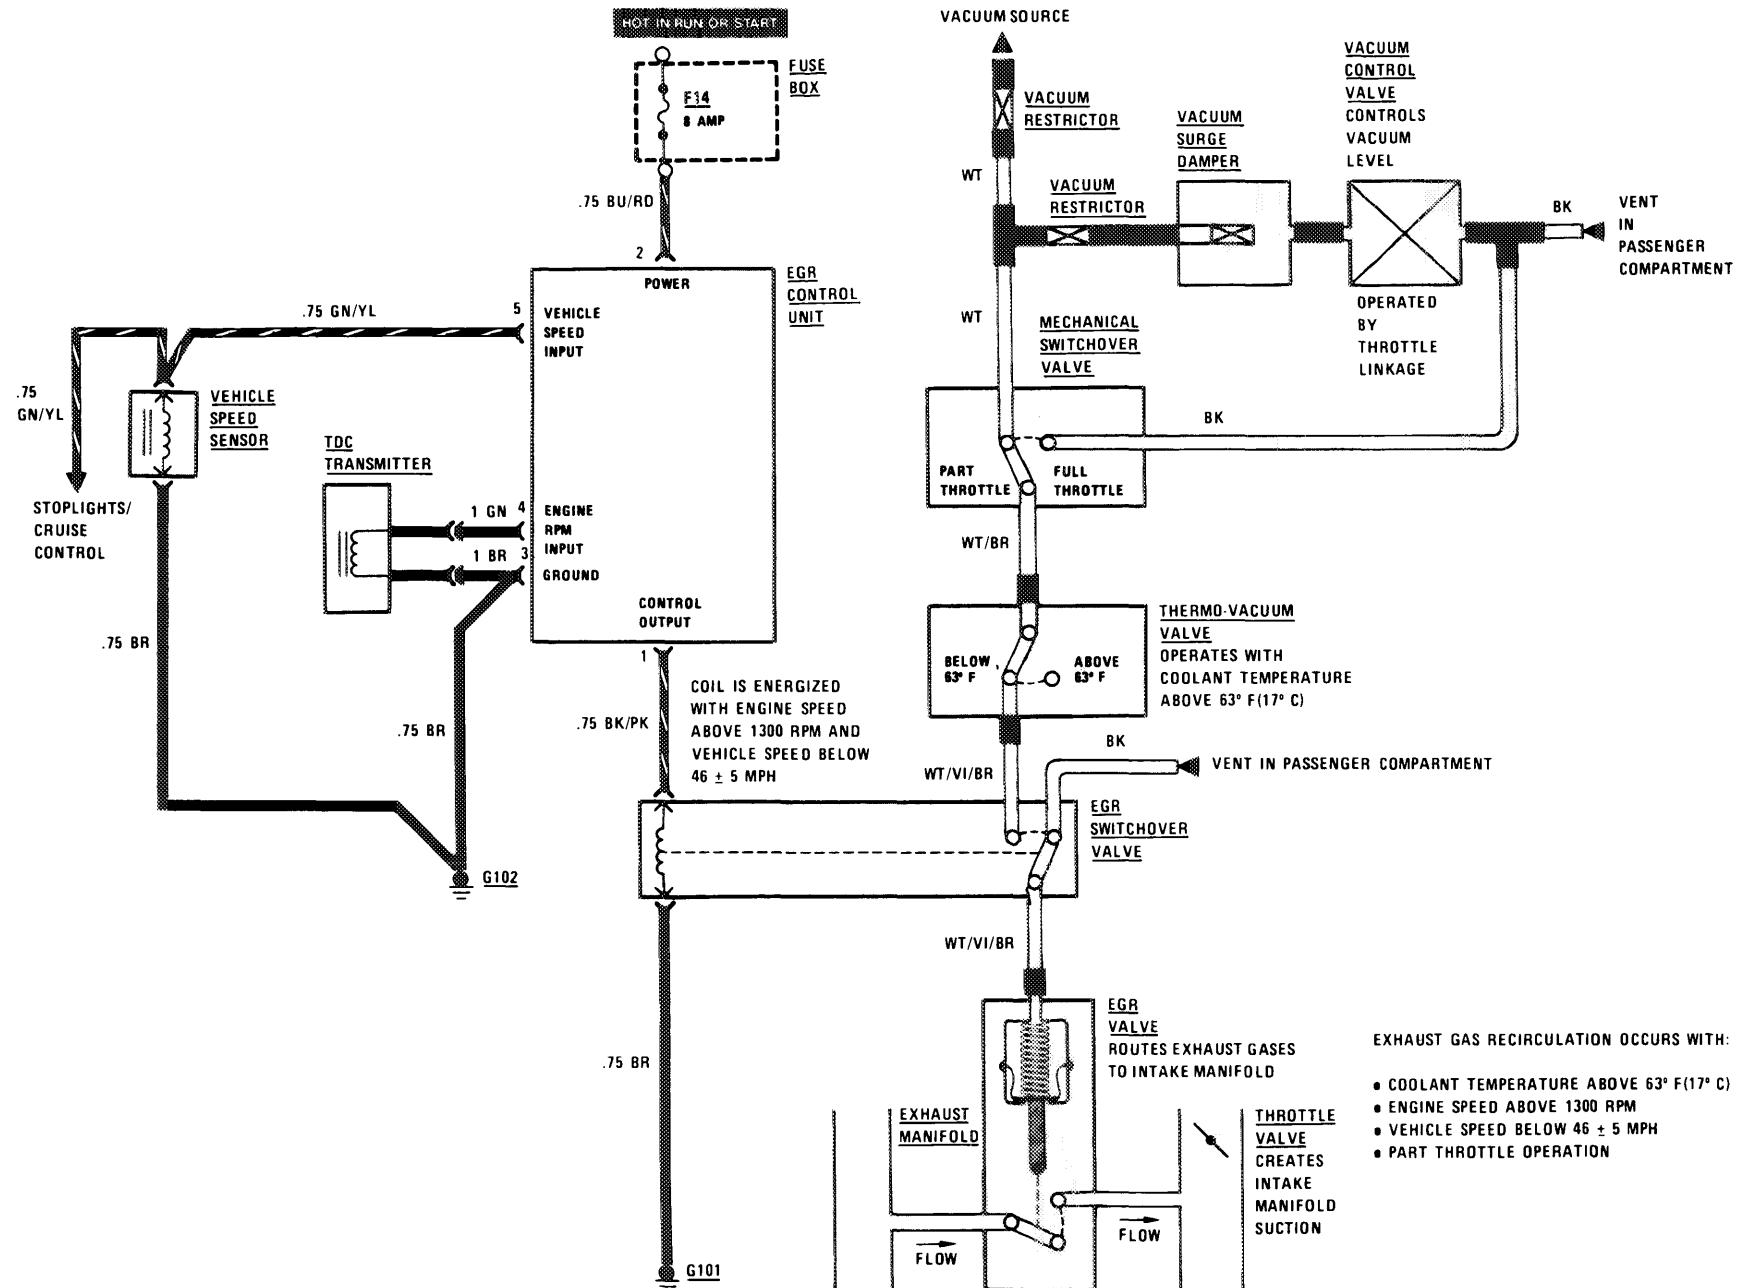

(For Component Locations See Page 203)







123.123

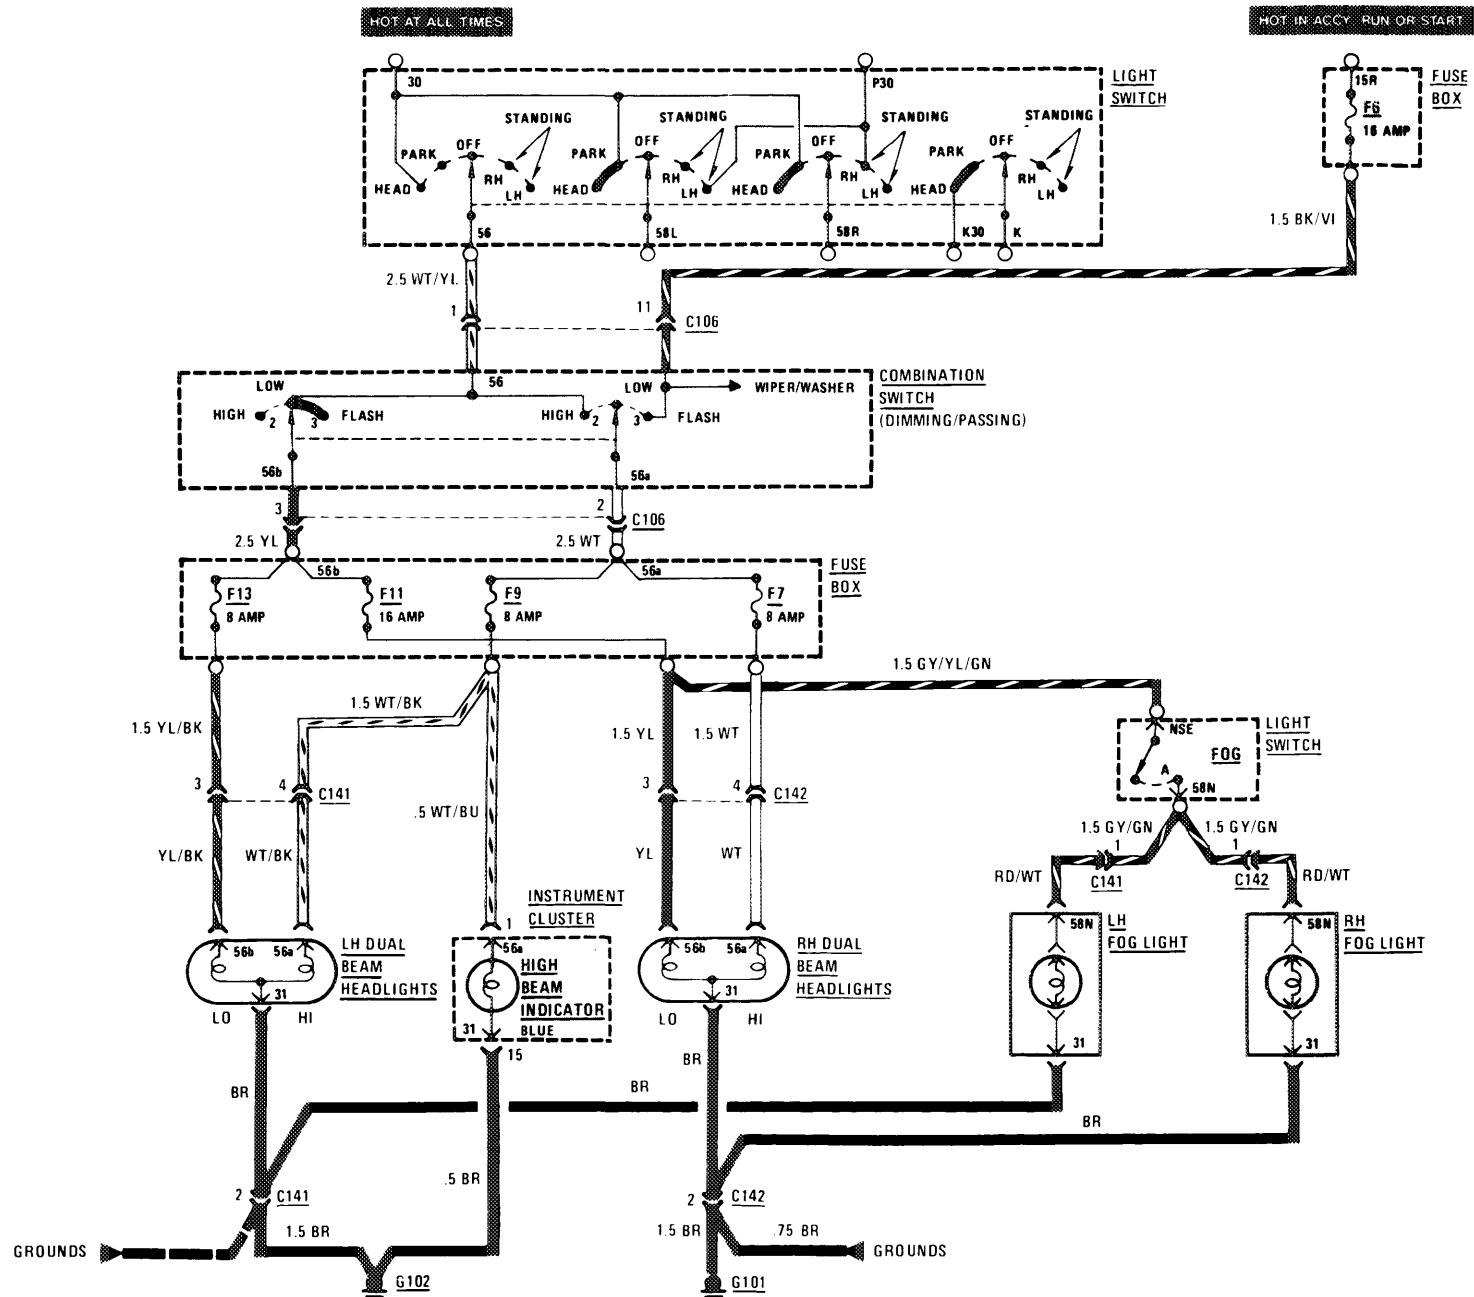

## REVISIONS



## BACKUP LIGHTS / TRANSMISSION KICKDOWN

(For Component Locations See Page 201)

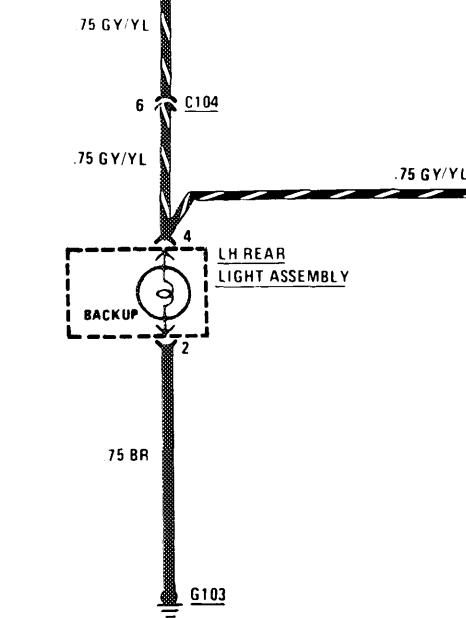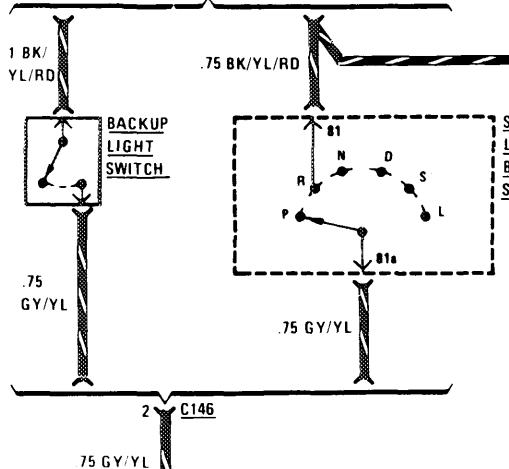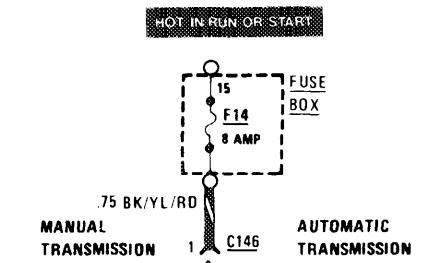


## GLOVE BOX LIGHT


(For Component Locations See Page 201)

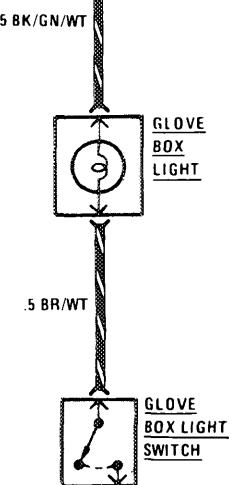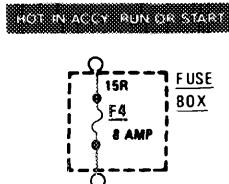

**LIGHTS: PARK/TAIL**  
(For Component Locations See Page 203)

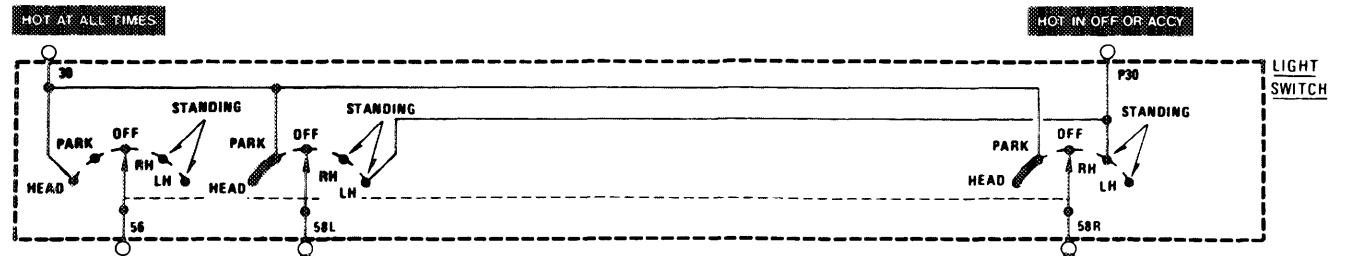


123.123

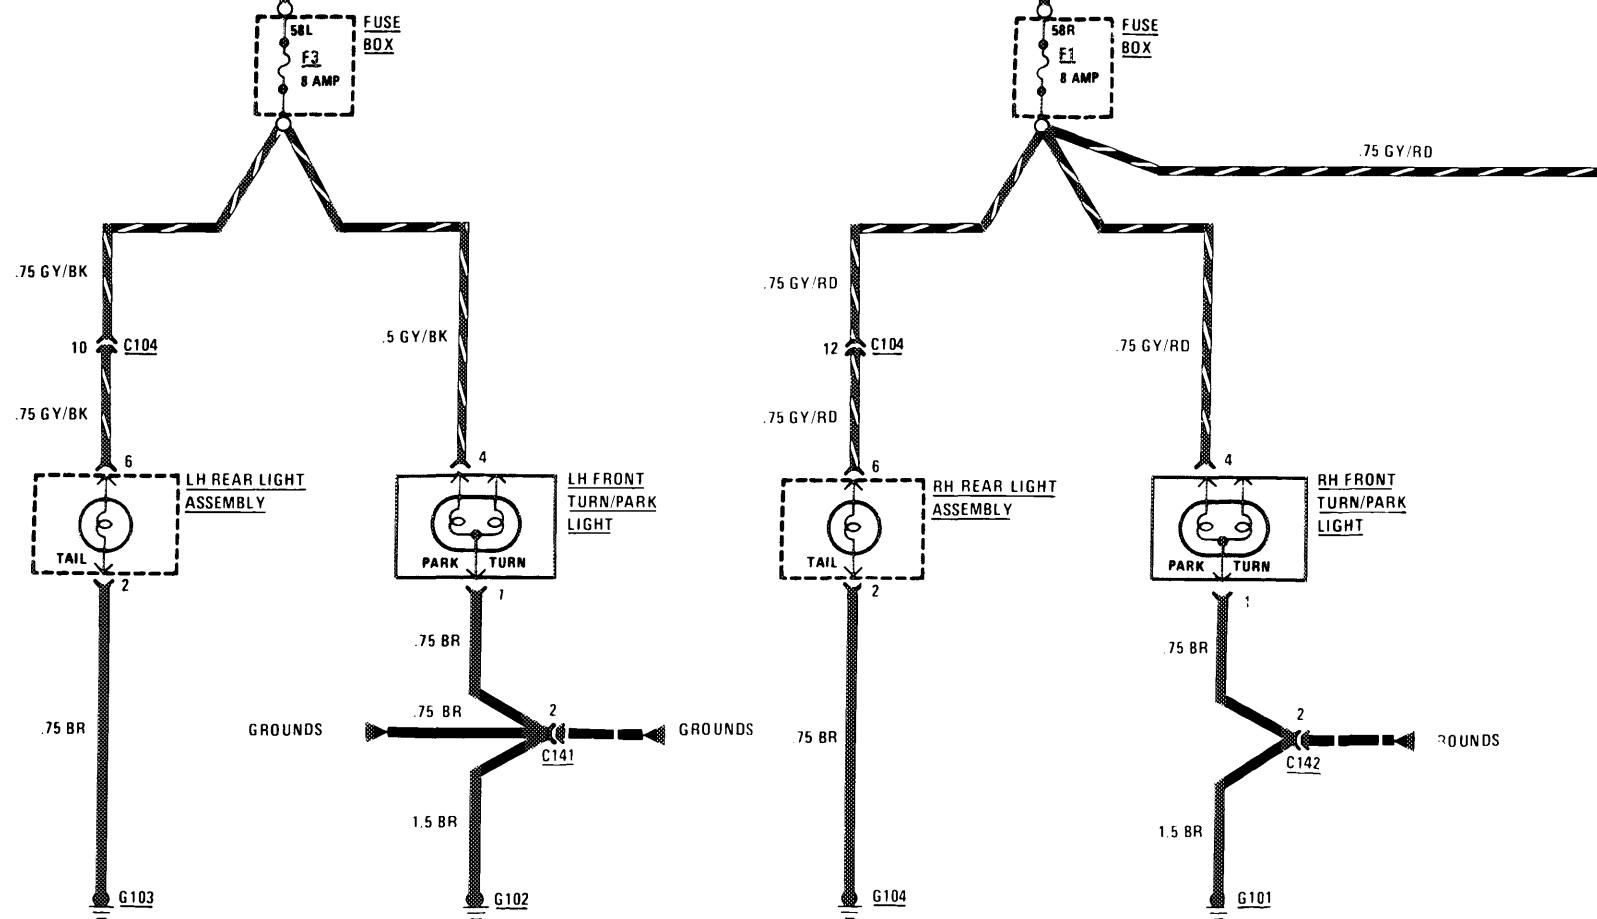

REVISIONS:


## LIGHTS: MARKER/LICENSE/TRUNK

(For Component Locations See Page 203)

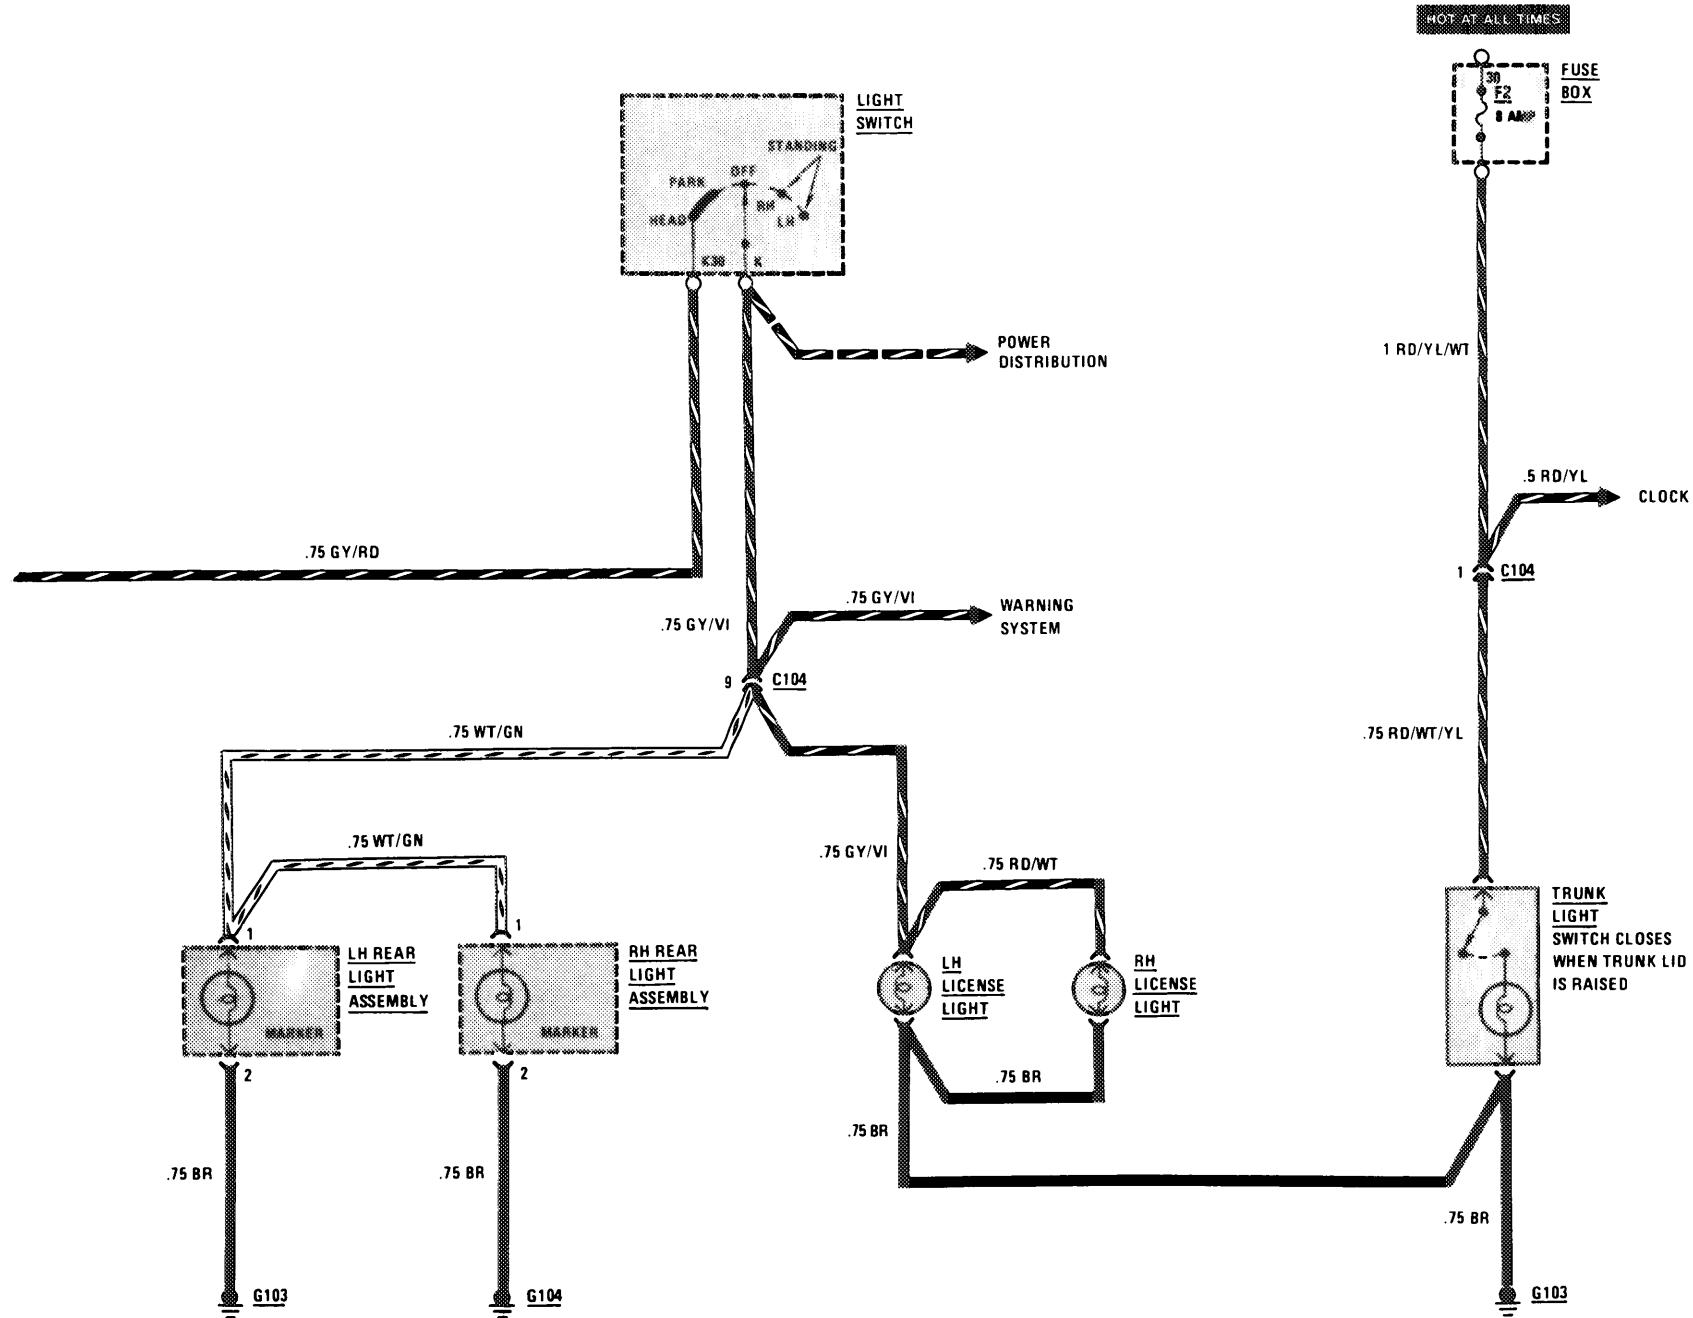

# AUTOMATIC TRANSMISSION


123.123

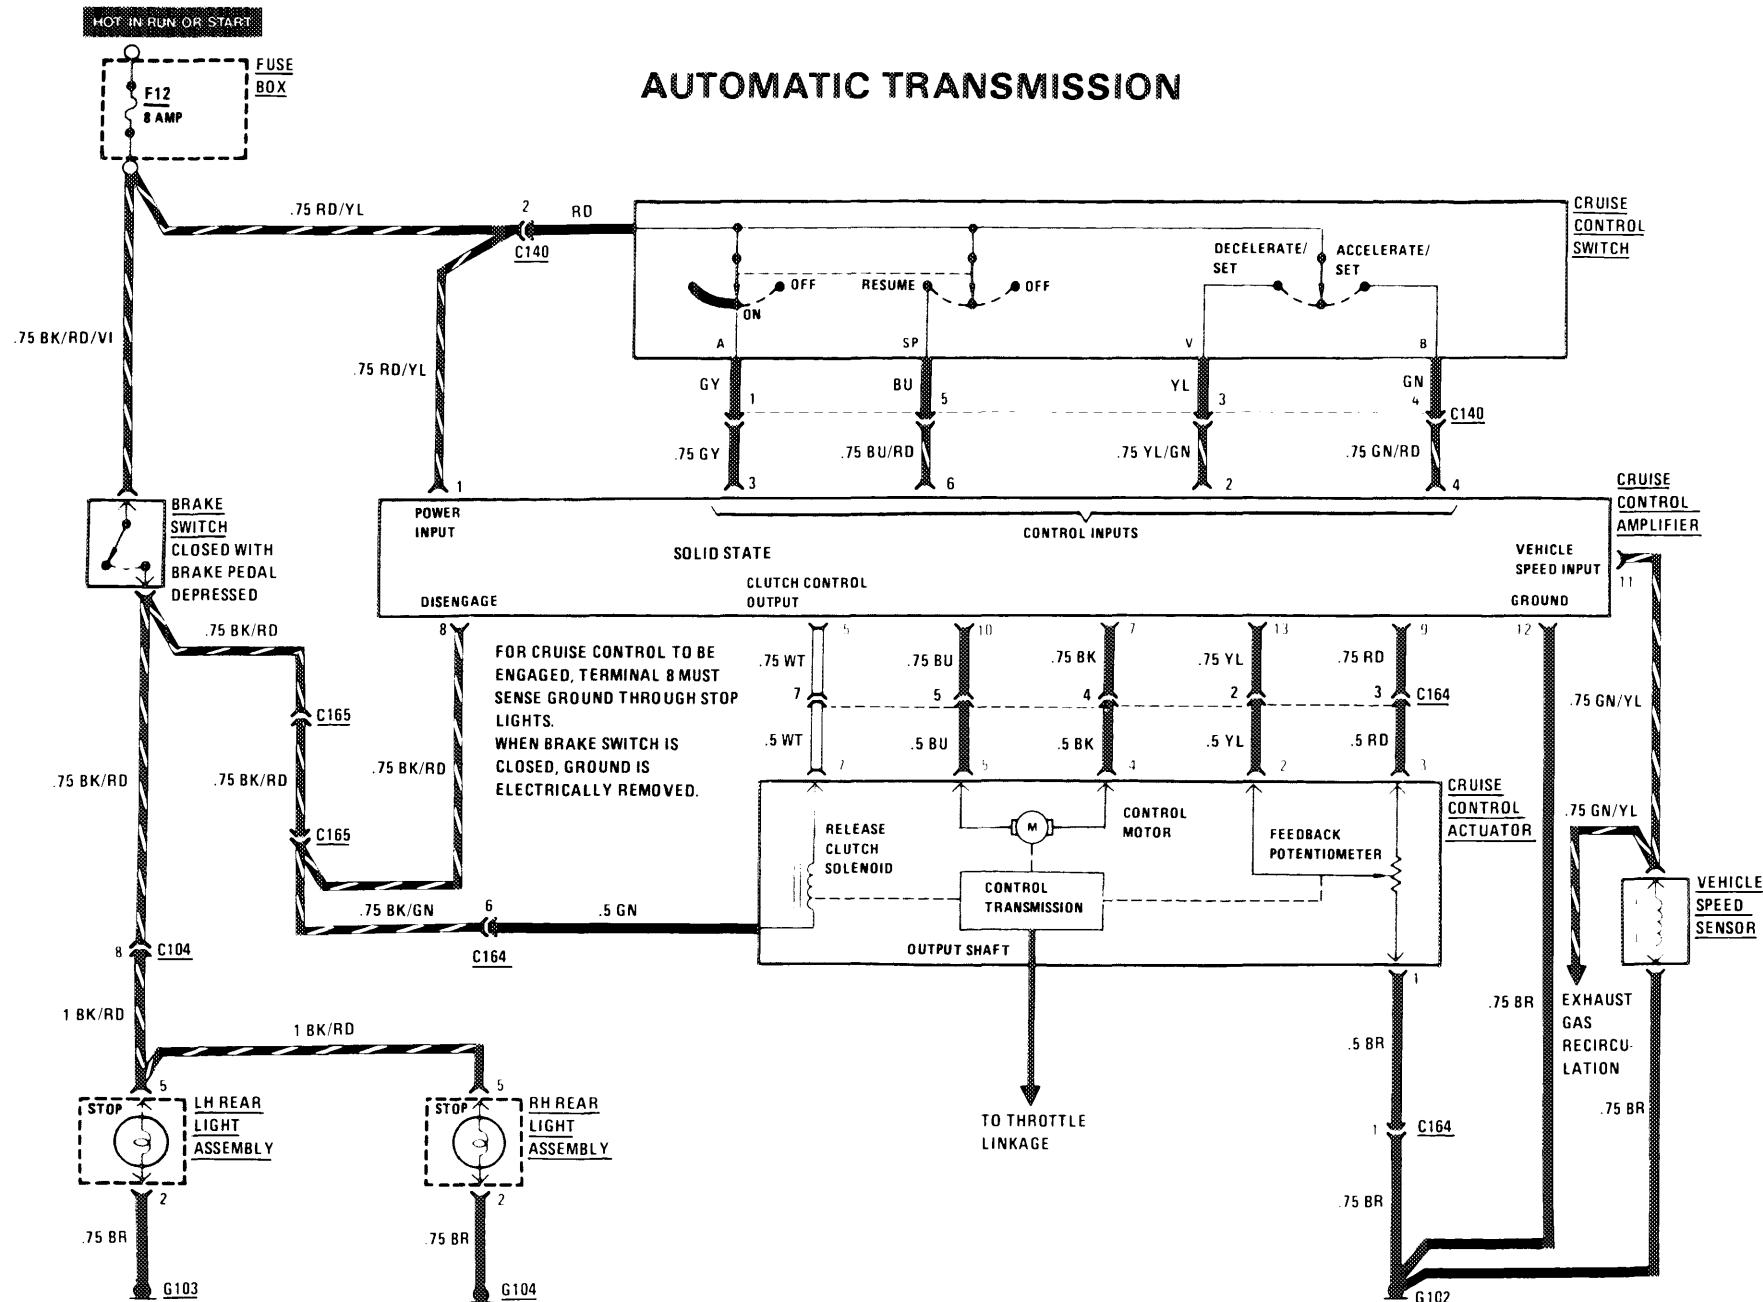

## REVISIONS


## STOPLIGHTS/CRUISE CONTROL (MANUAL TRANSMISSION)

(For Component Locations See Page 205)

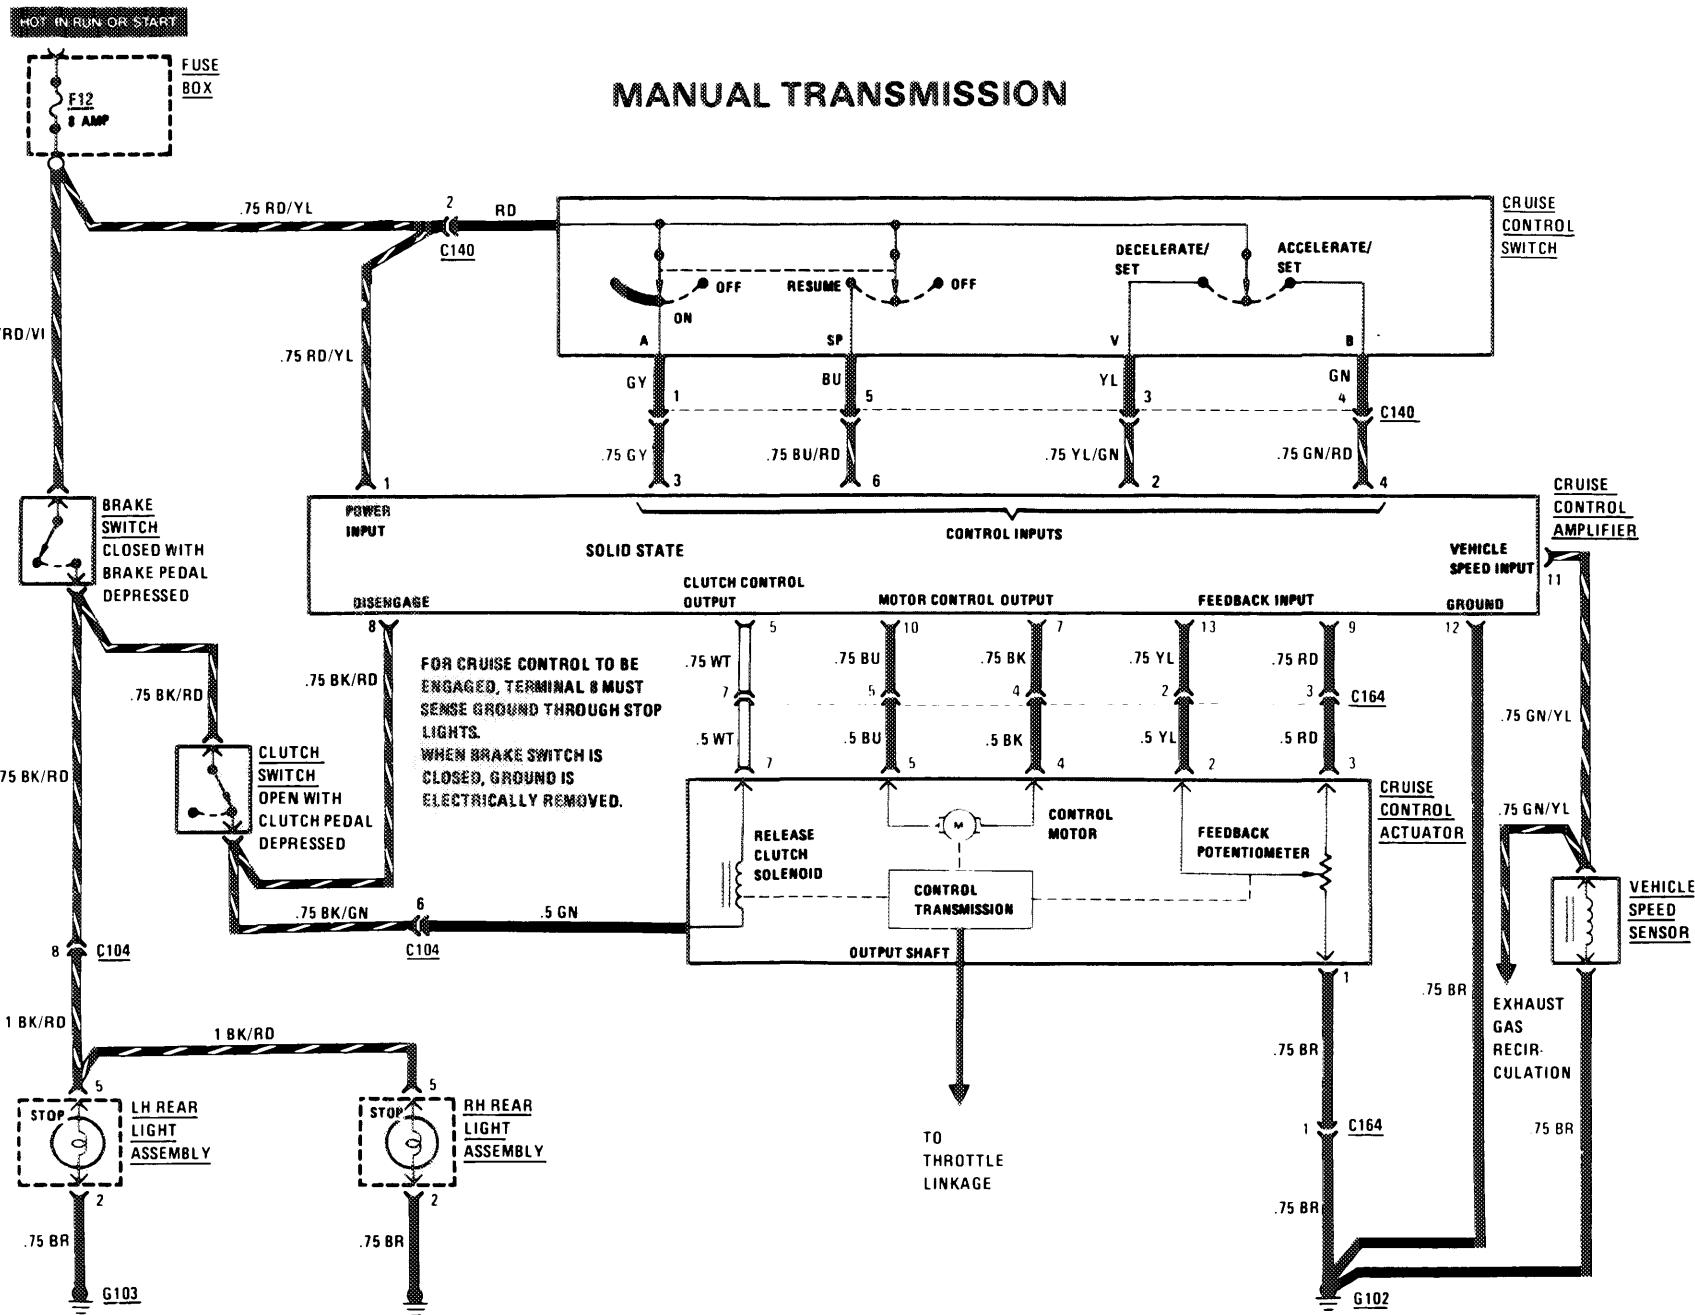

## CENTER CONSOLE ILLUMINATION


(For Component Locations See Page 201)

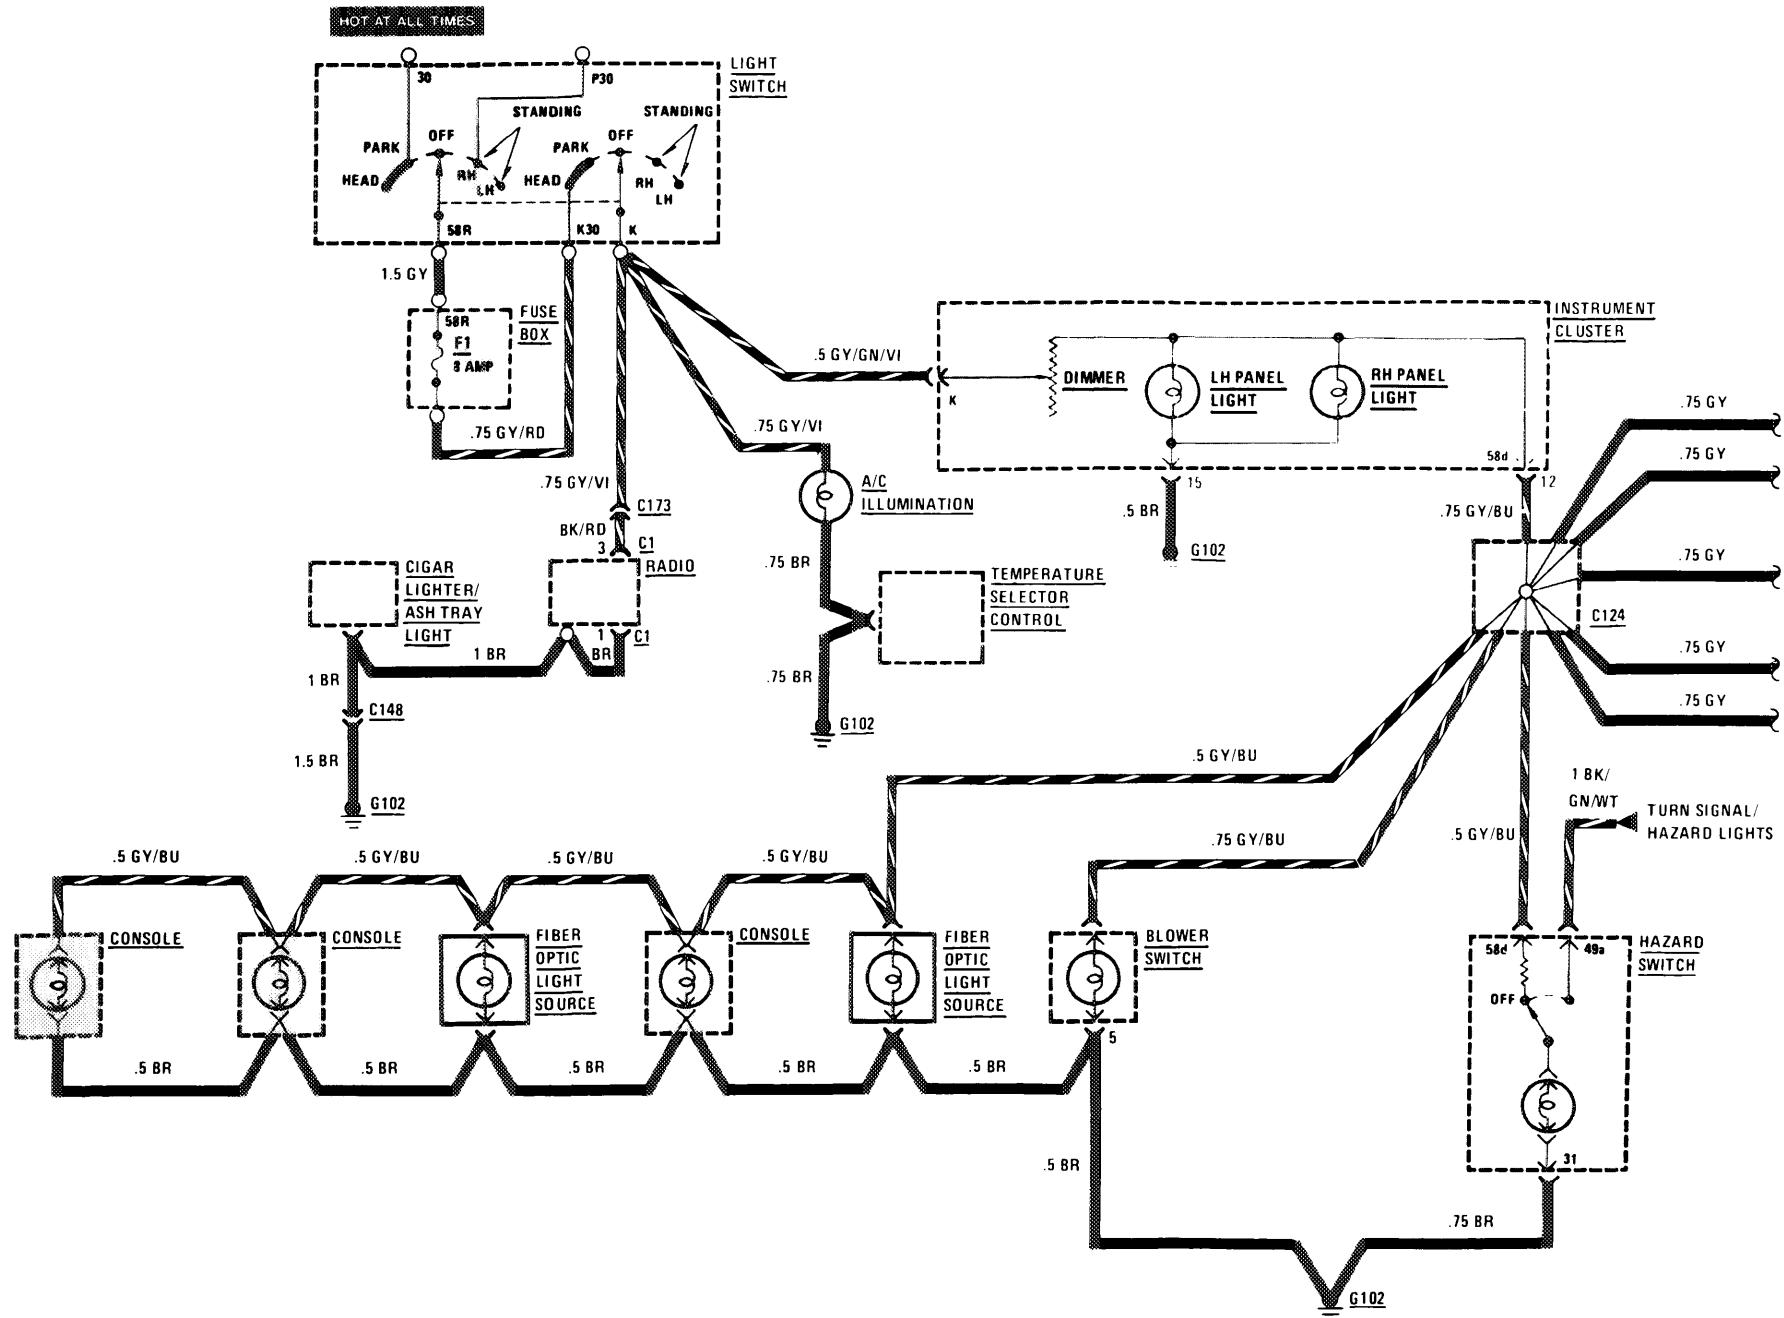

**REVISIONS:**


# CENTER CONSOLE ILLUMINATION

(For Component Locations See Page 201)

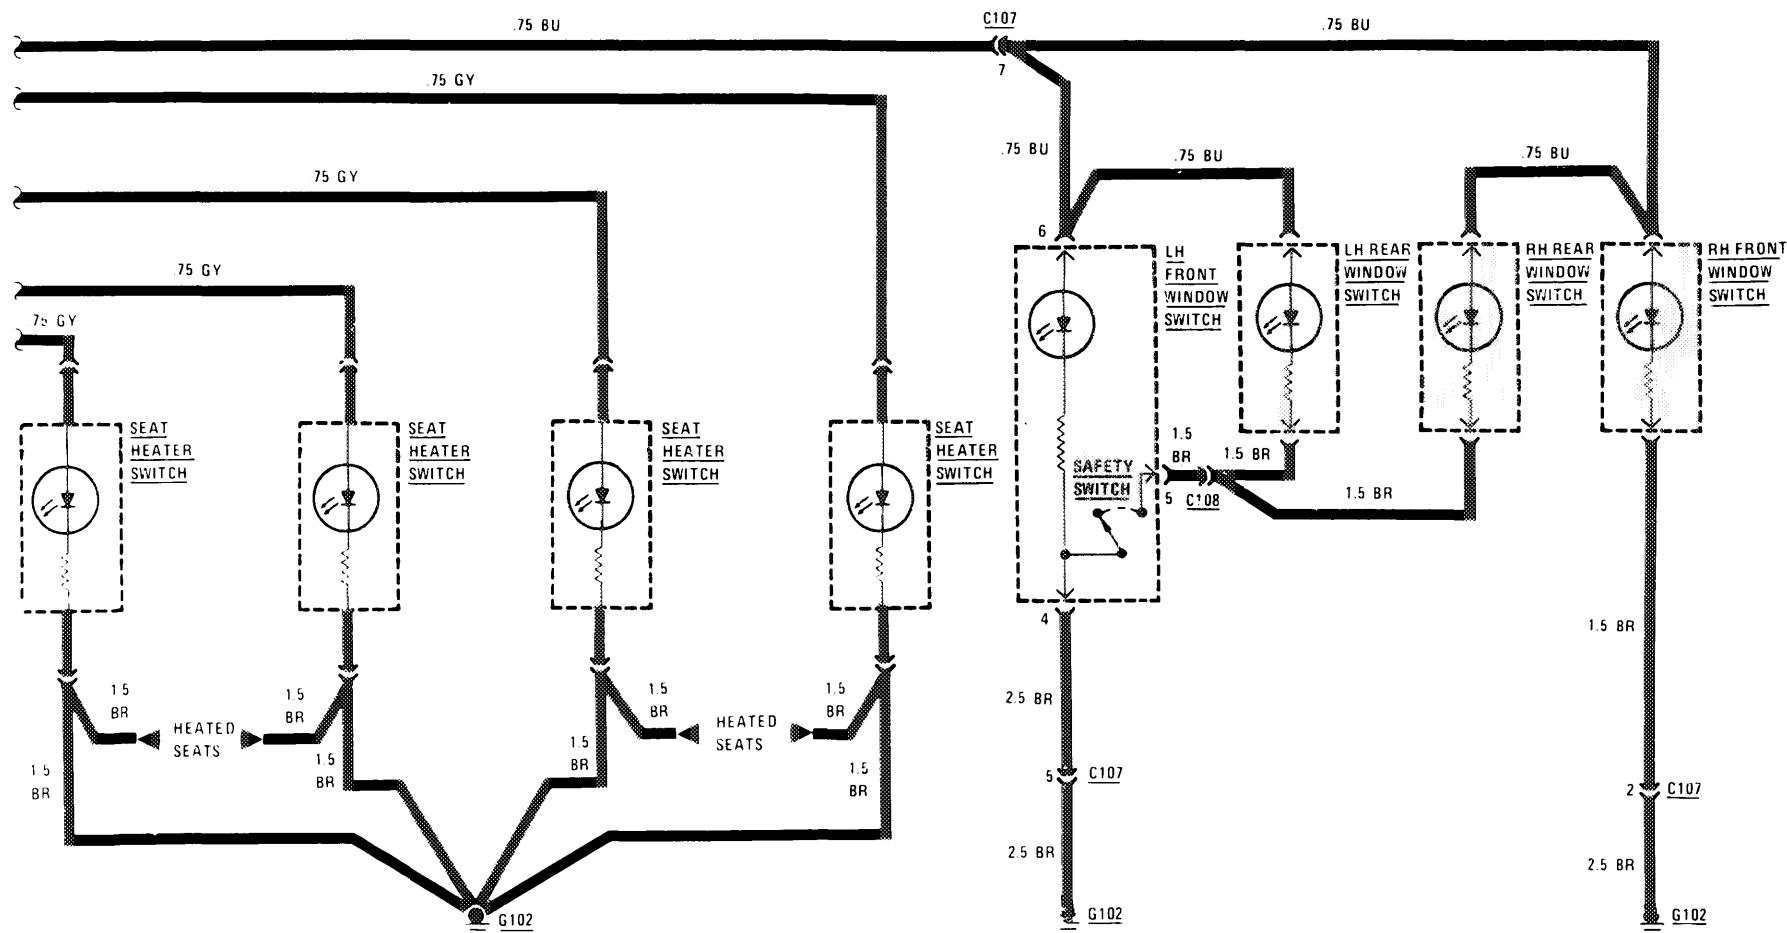

## TURN SIGNAL/HAZARD LIGHTS


(For Component Locations See Page 205)

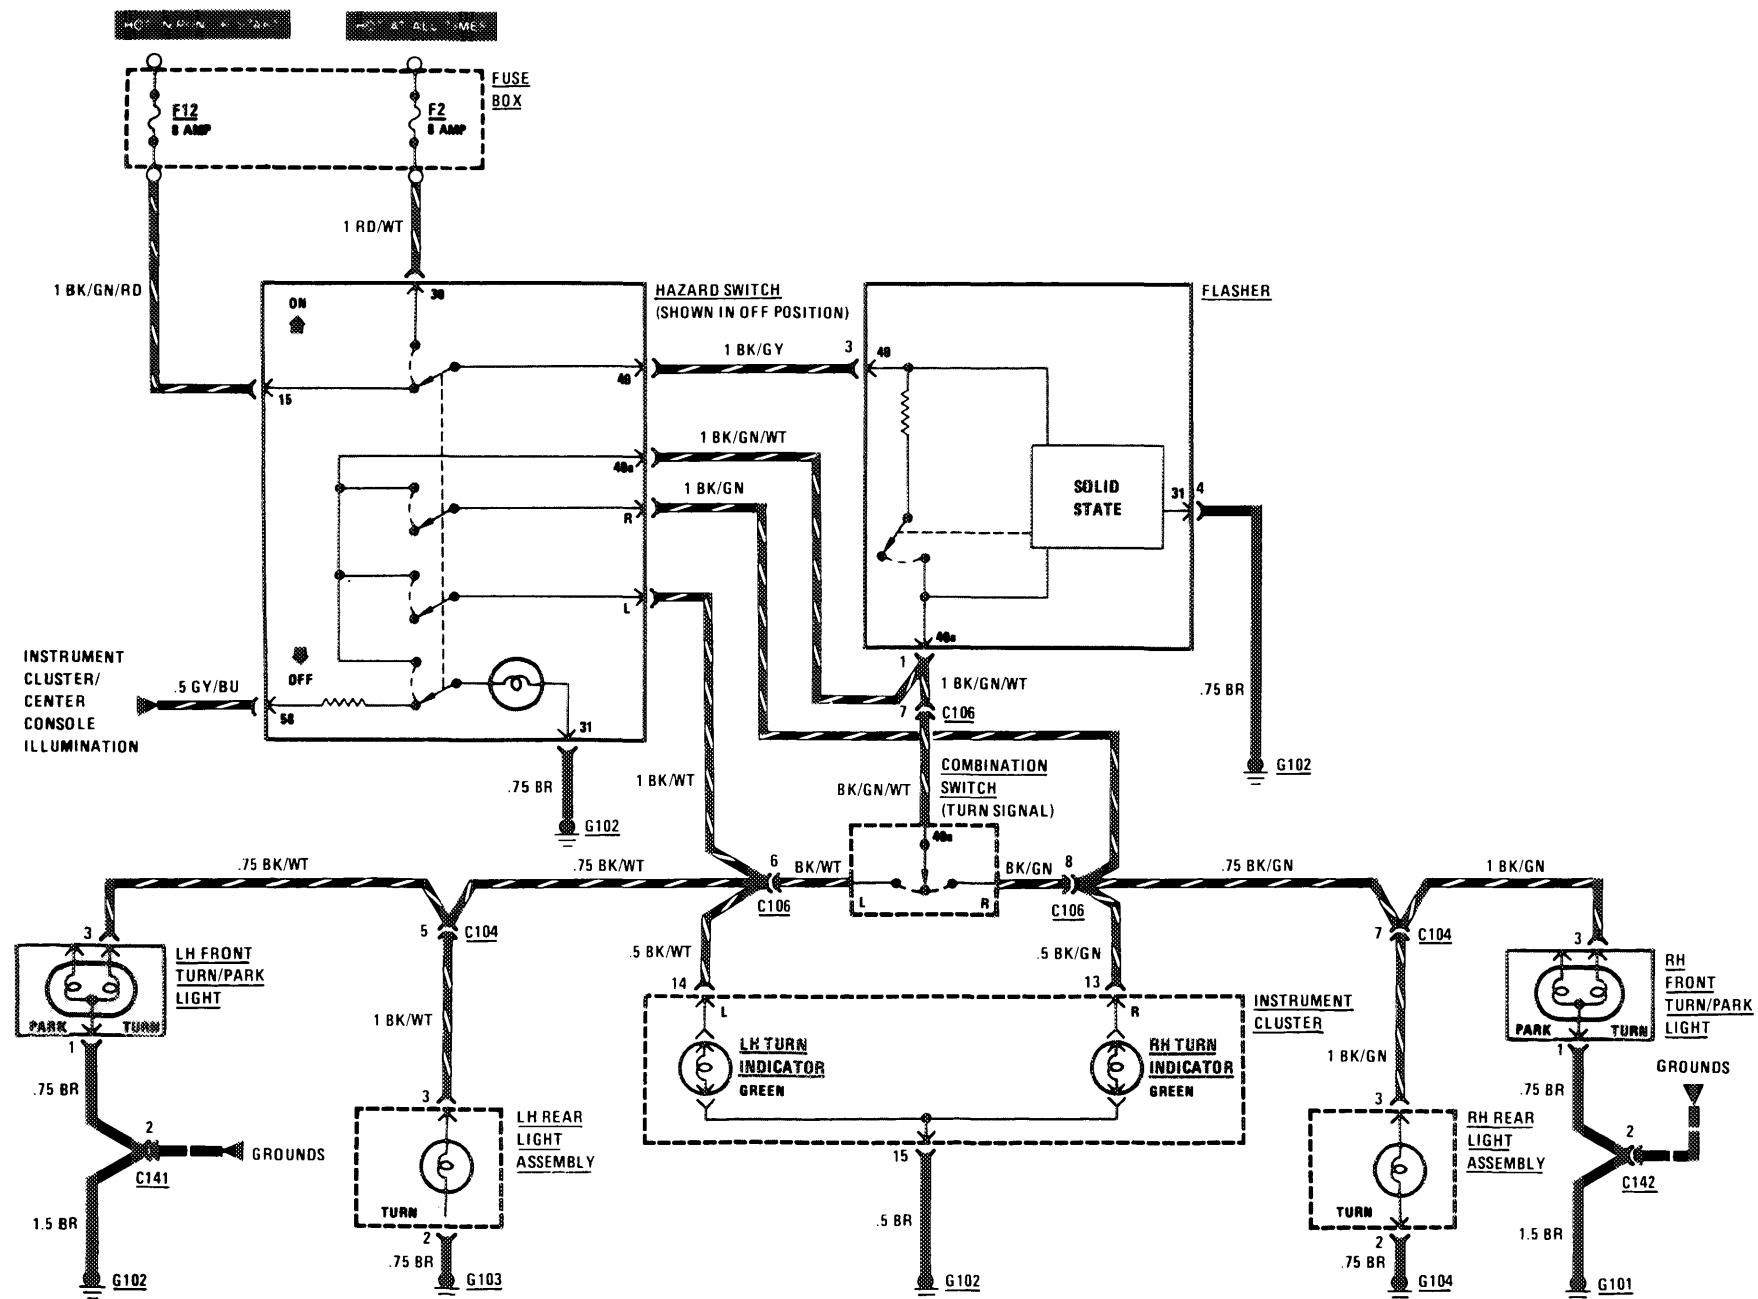

REVISIONS:

## COURTESY LIGHTS

(For Component Locations See Page 202)

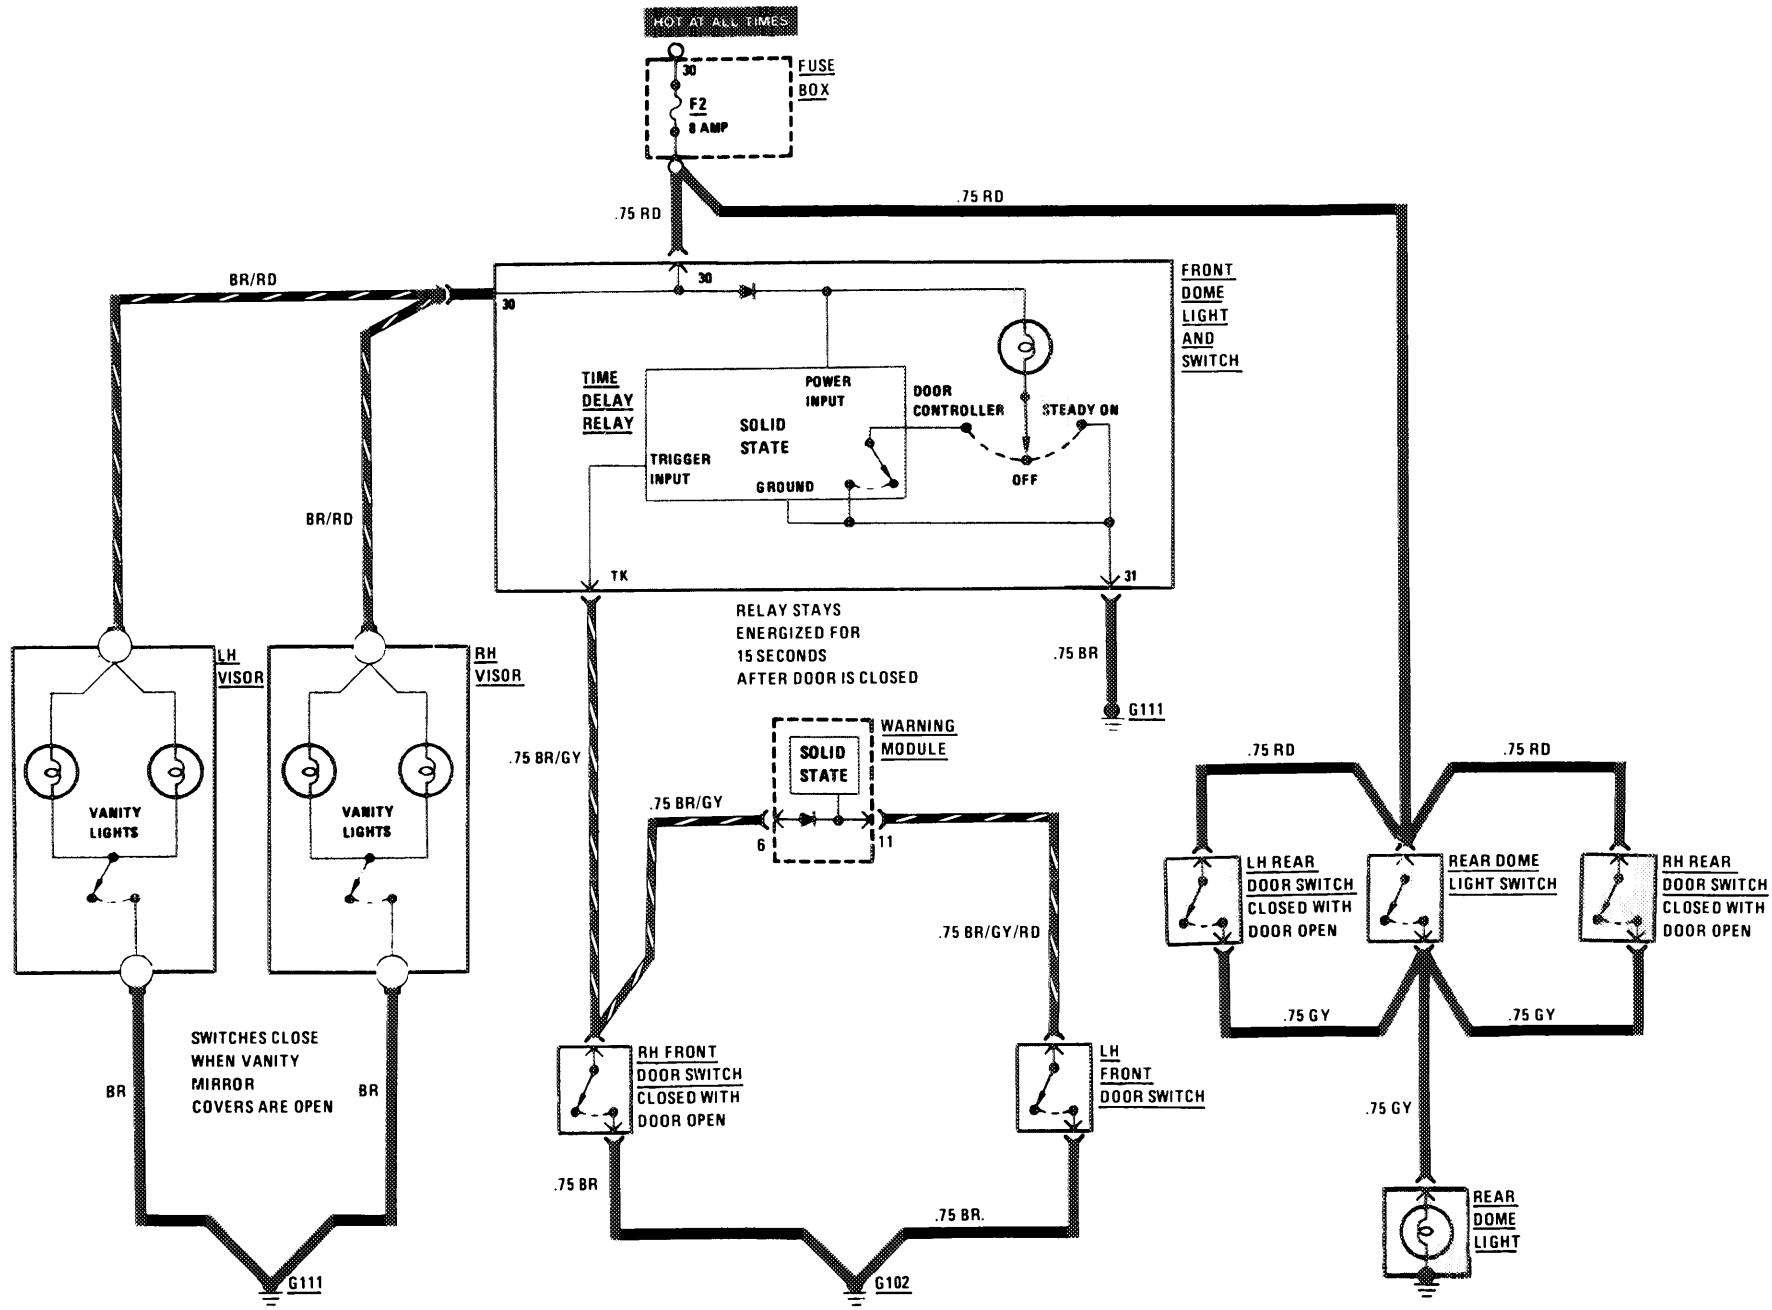


# WARNING INDICATORS/ GAUGES/ CLOCK/ INSTRUMENT CLUSTER ILLUMINATION

(For Component Locations See Page 206)


120

123.123

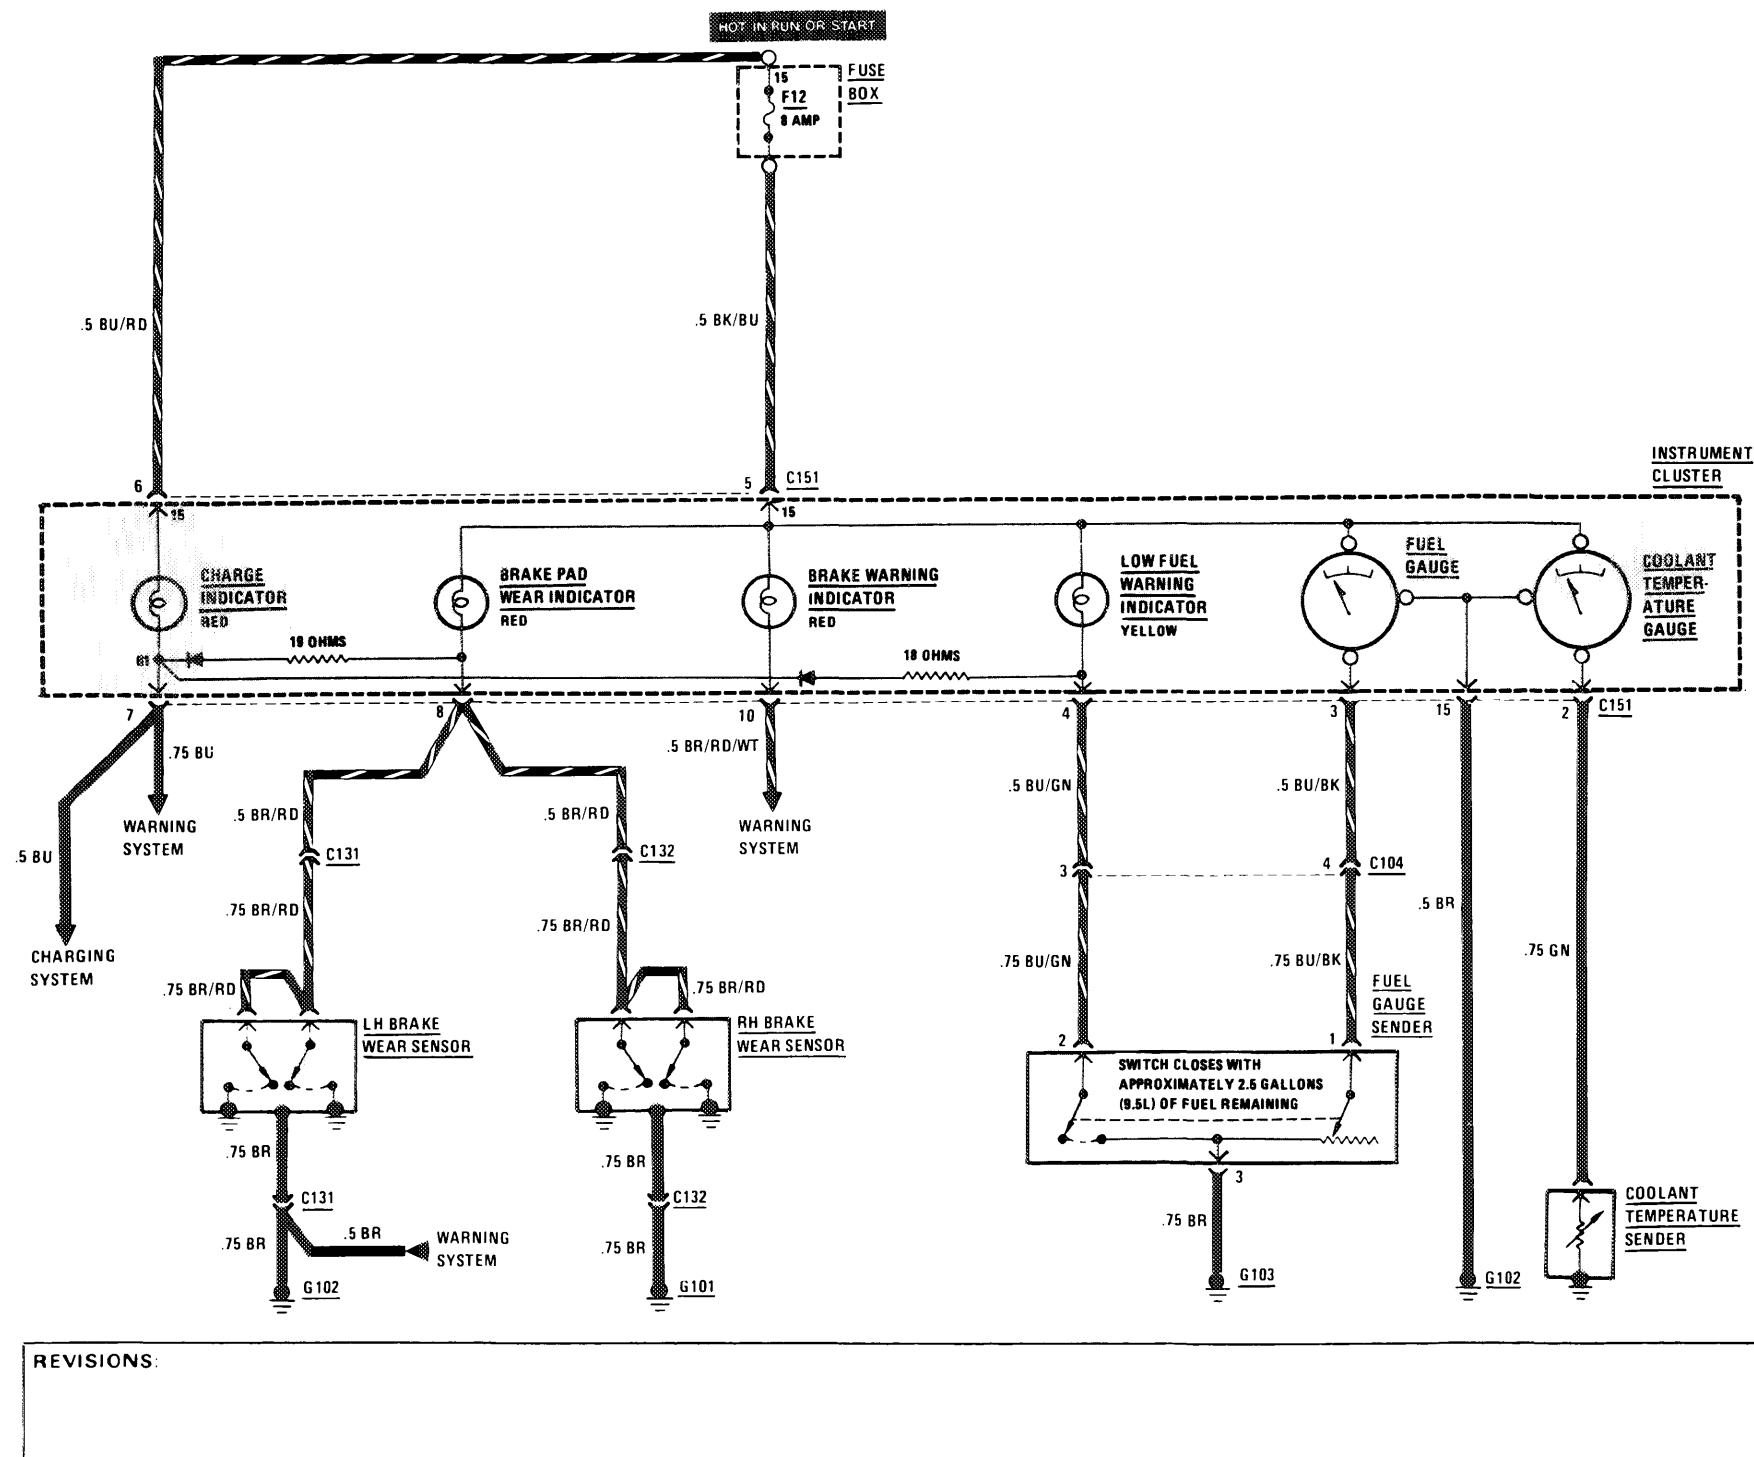


## WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

(For Component Locations See Page 206)

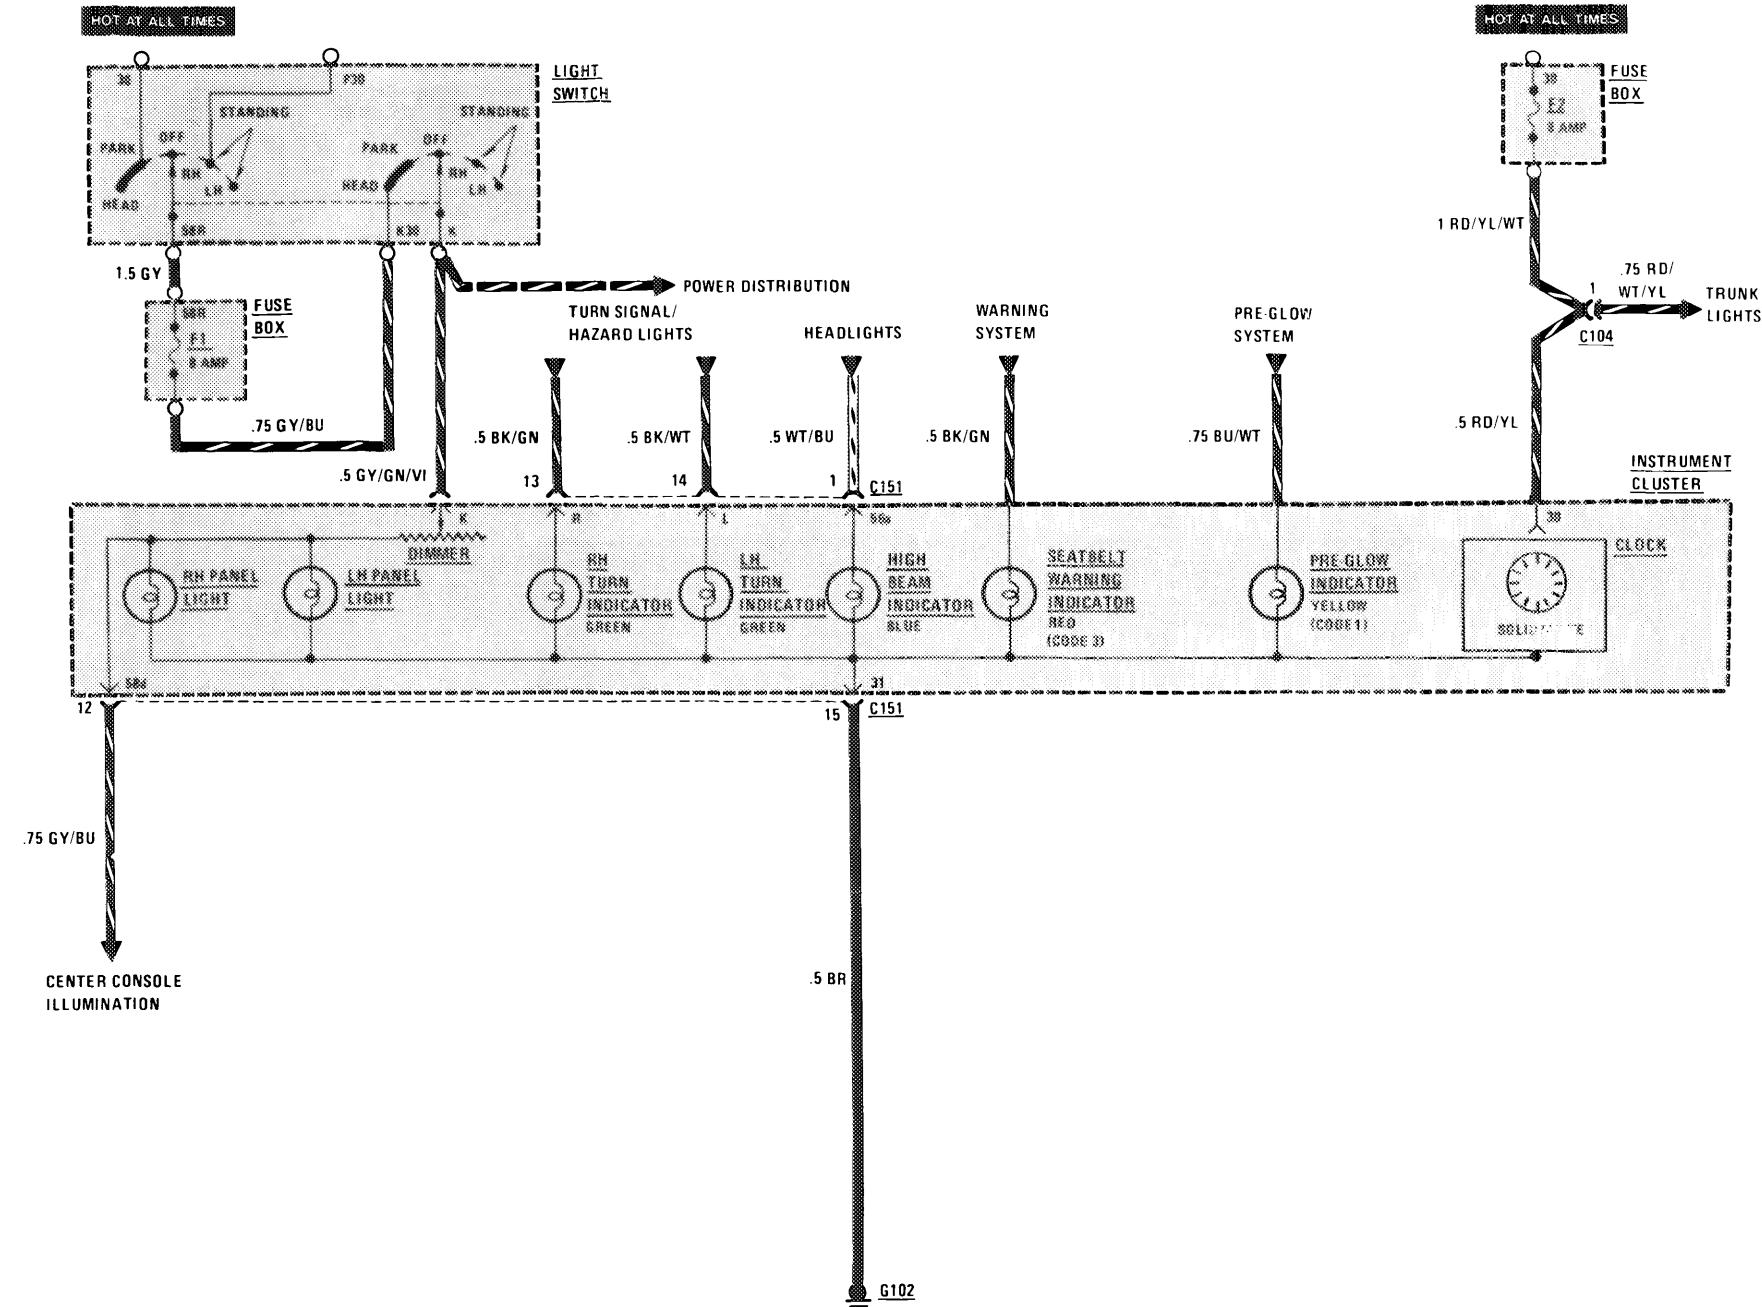

# WARNING SYSTEM


(For Component Locations See Page 206)

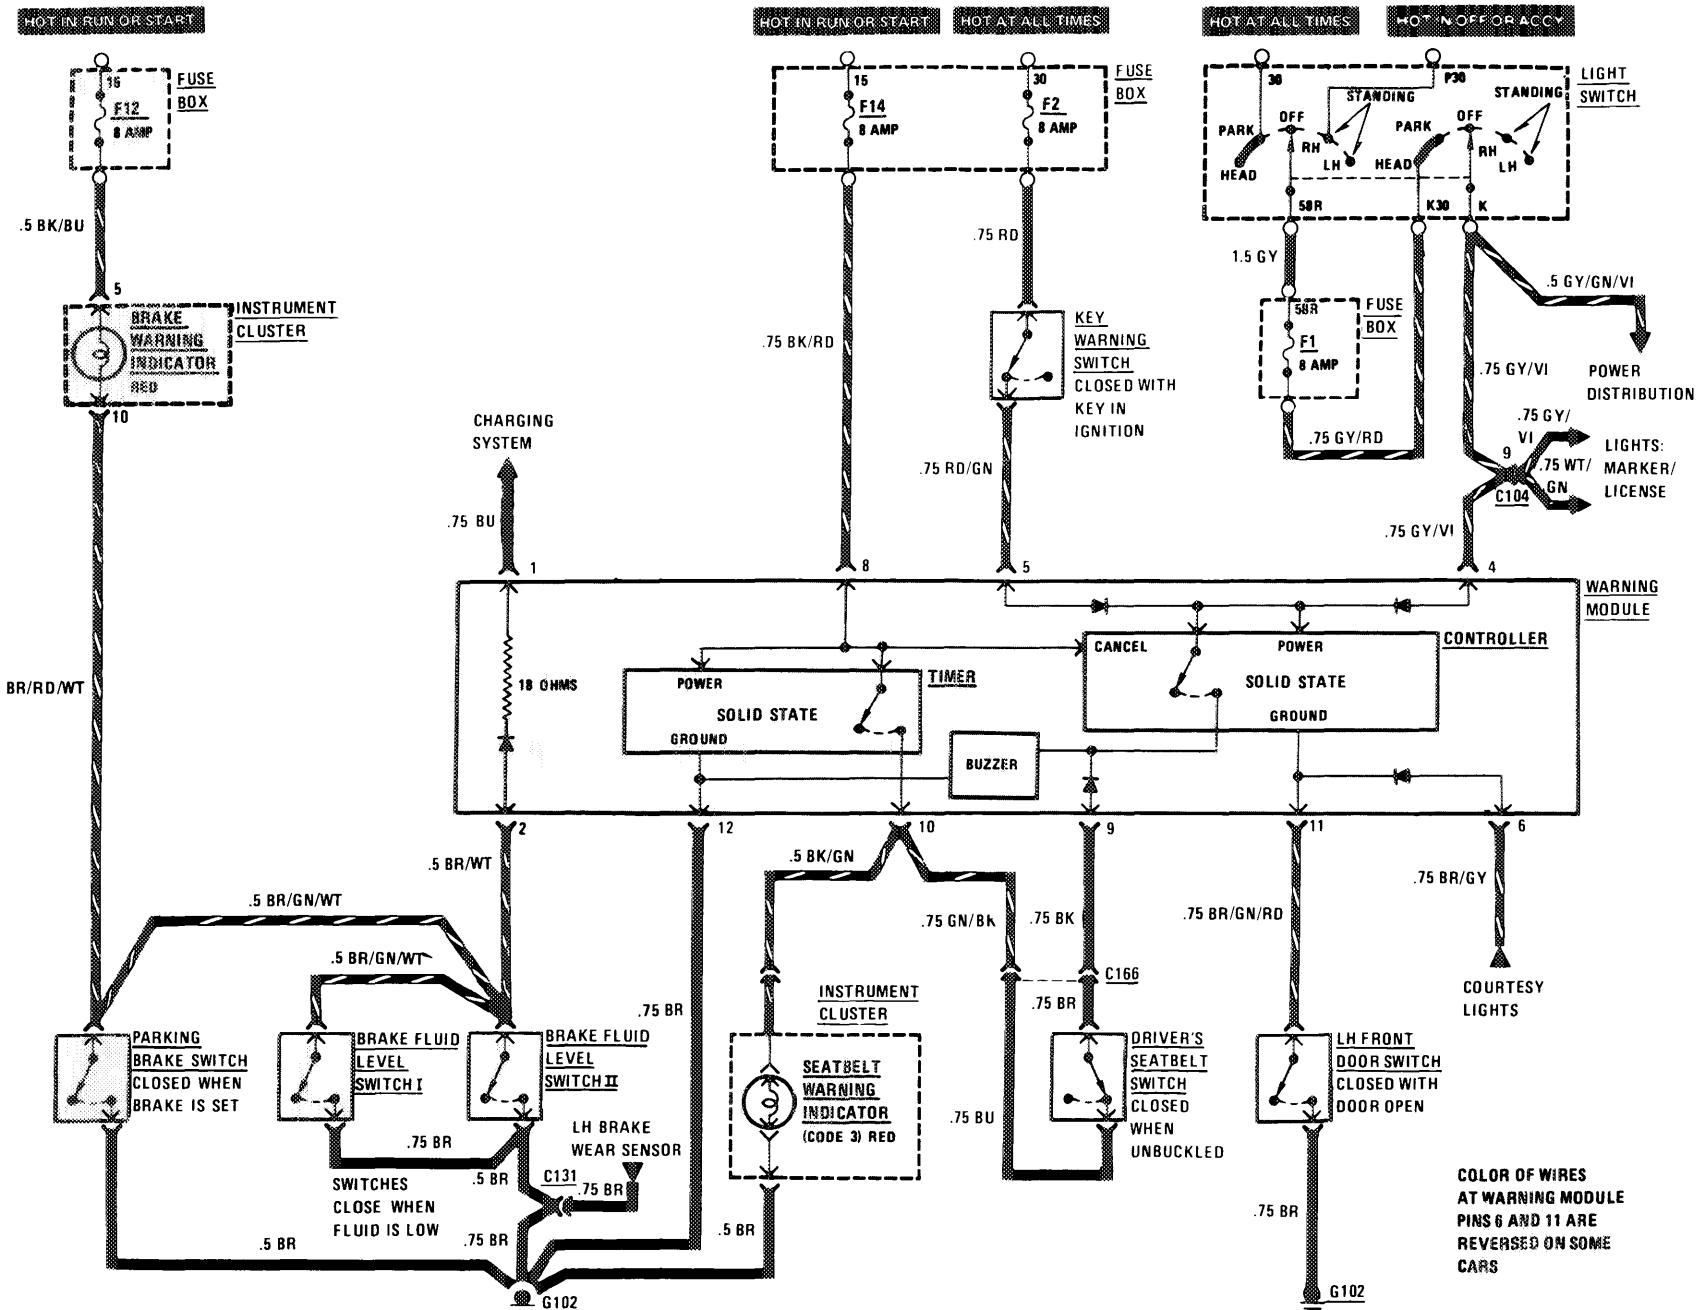

REVISIONS:


## WIPER/WASHER

(For Component Locations See Page 206)

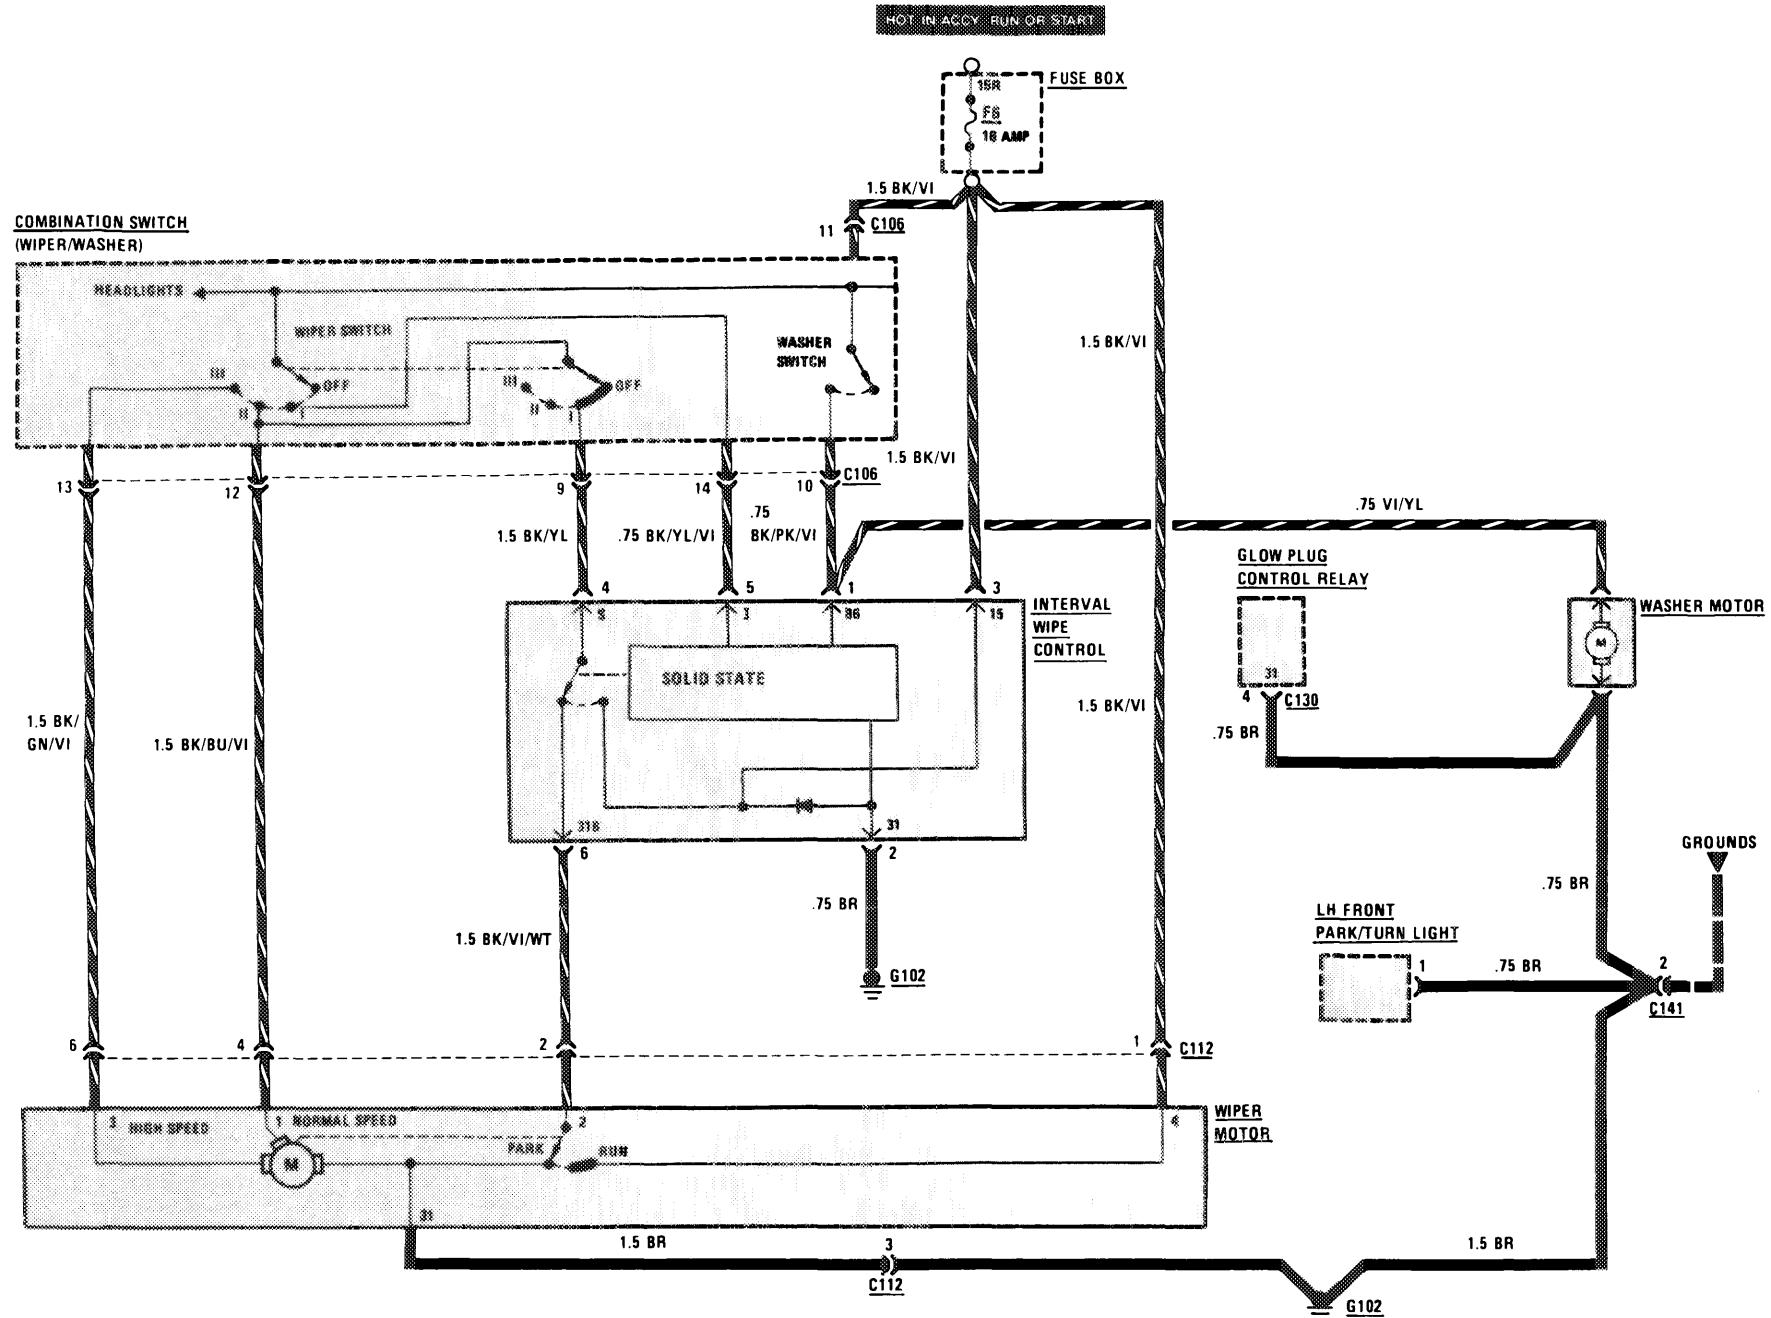

## AIR CONDITIONING/HEATER


(For Component Locations See Page 201)

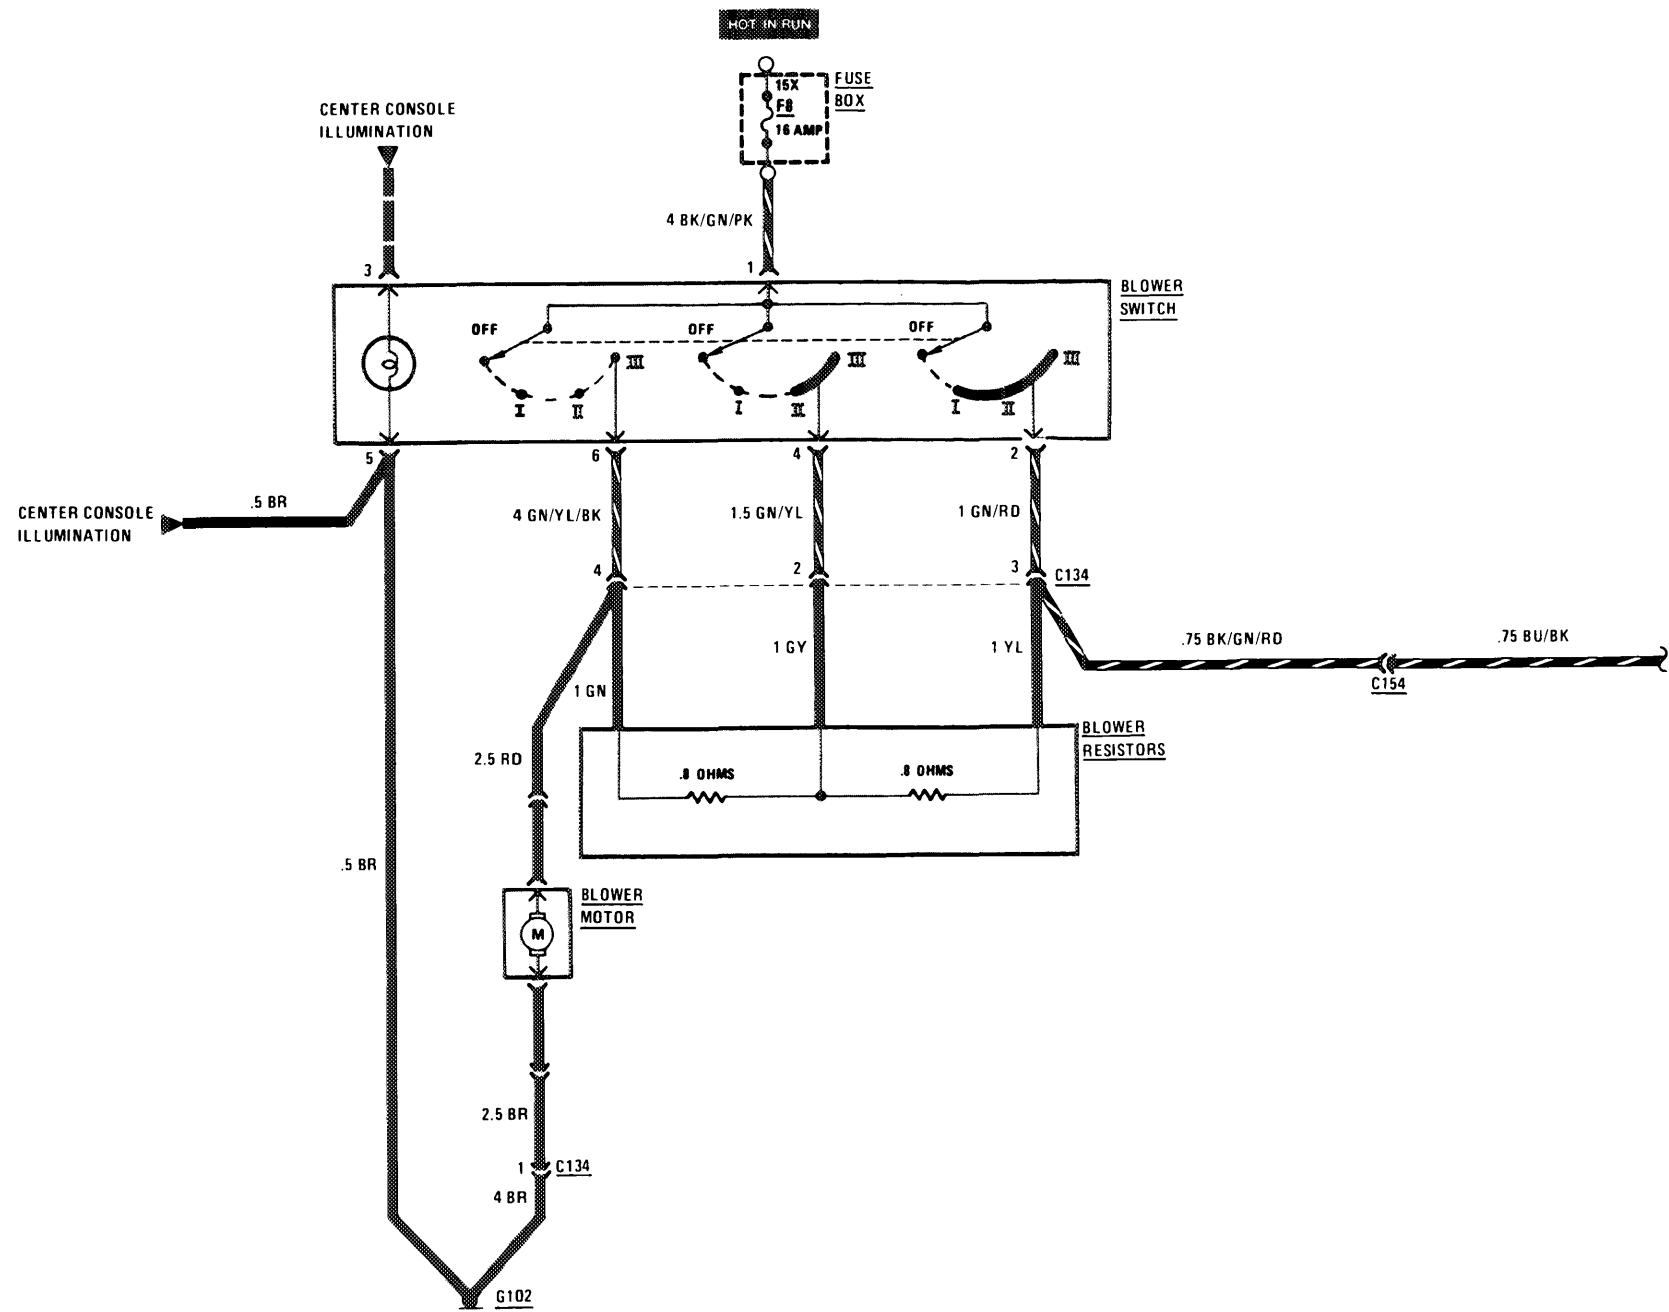

REVISIONS:

## AIR CONDITIONING/HEATER/AUXILIARY FAN

(For Component Locations See Page 201)

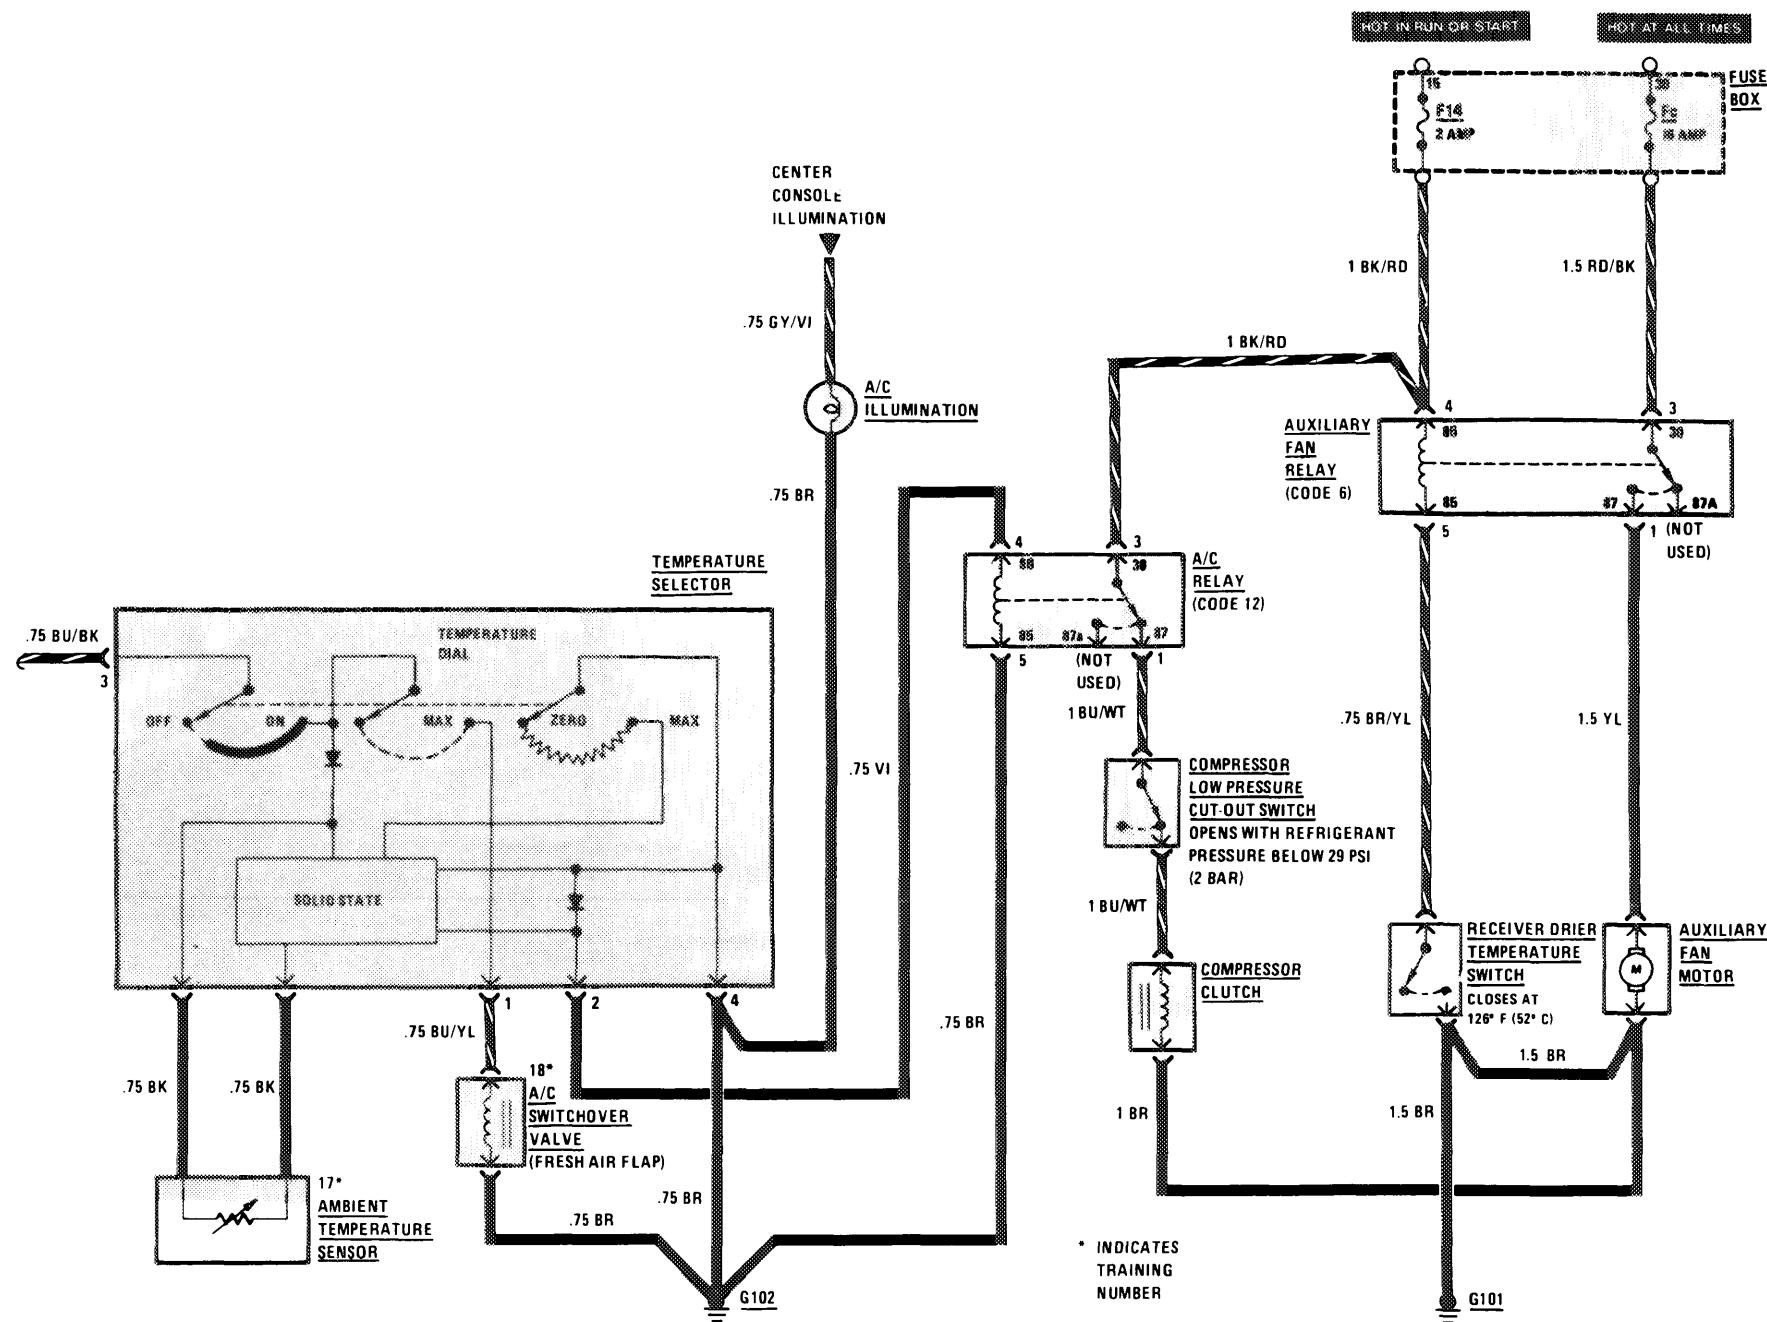


\* INDICATE  
TRAINING  
NUMBER

**REVISIONS:**

125

# REAR DEFOGGER

(For Component Locations See Page 204)


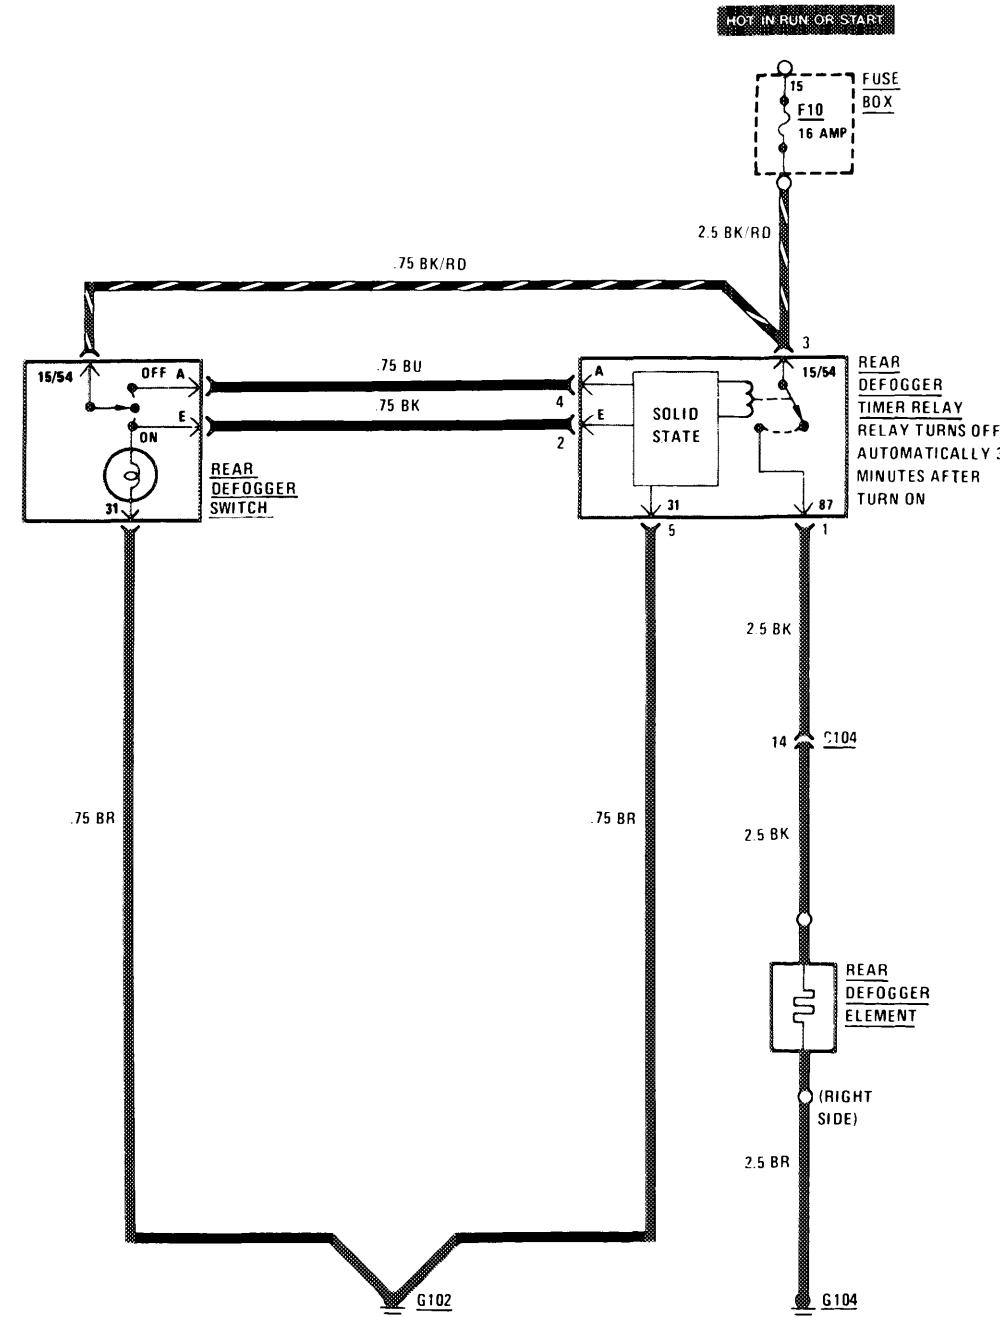


123.123


REVISIONS:

**HORNS**

(For Component Locations See Page 203)

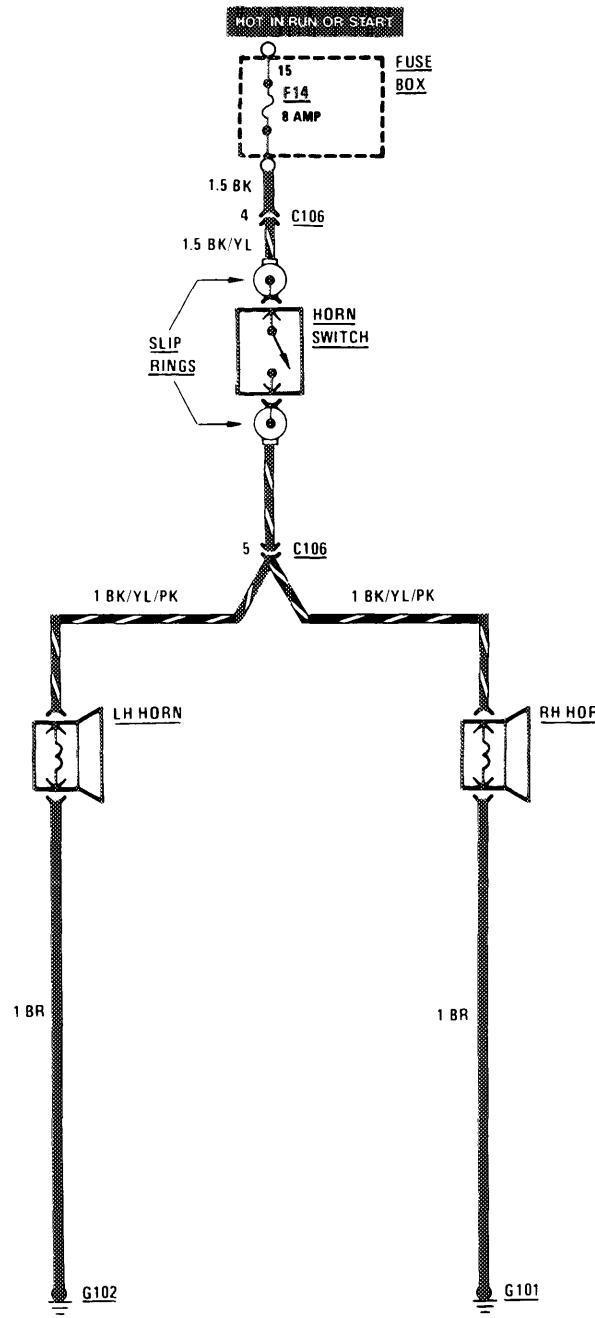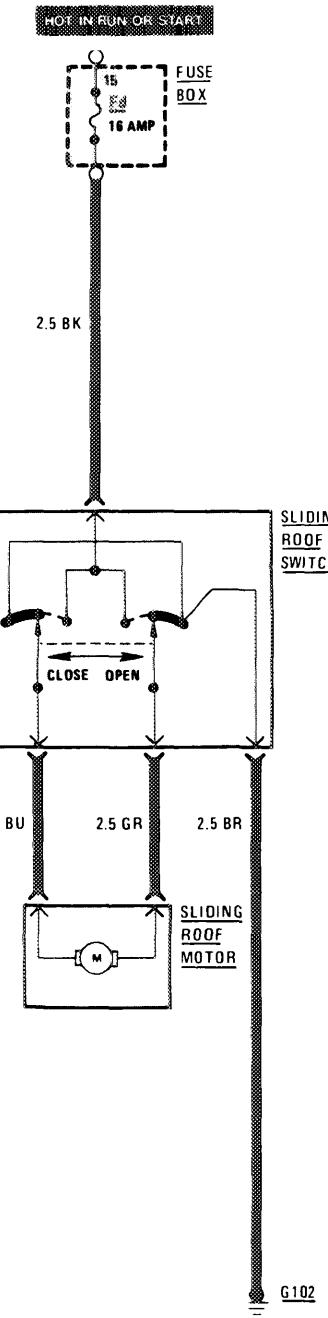
**SLIDING ROOF**

(For Component Locations See Page 204)

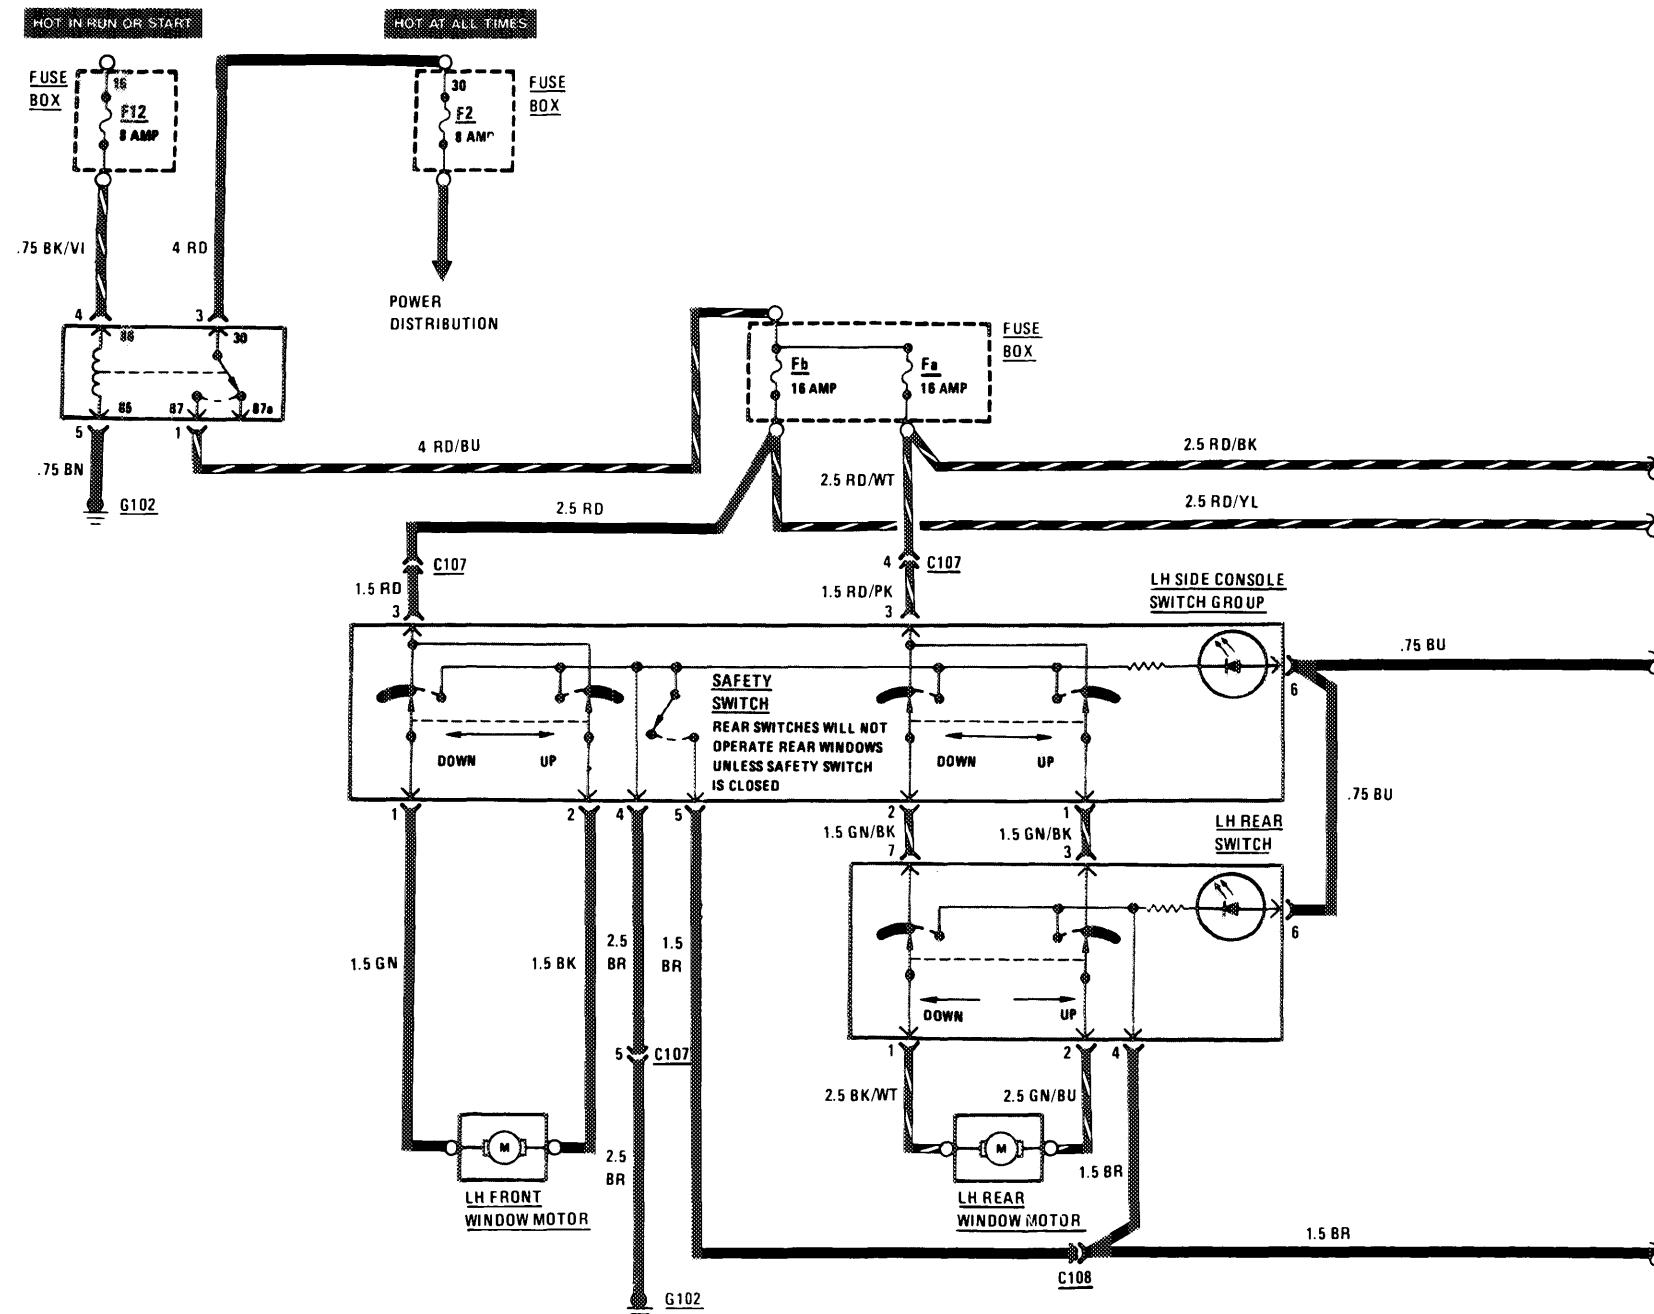

## REVISIONS


(For Component Locations See Page 204)

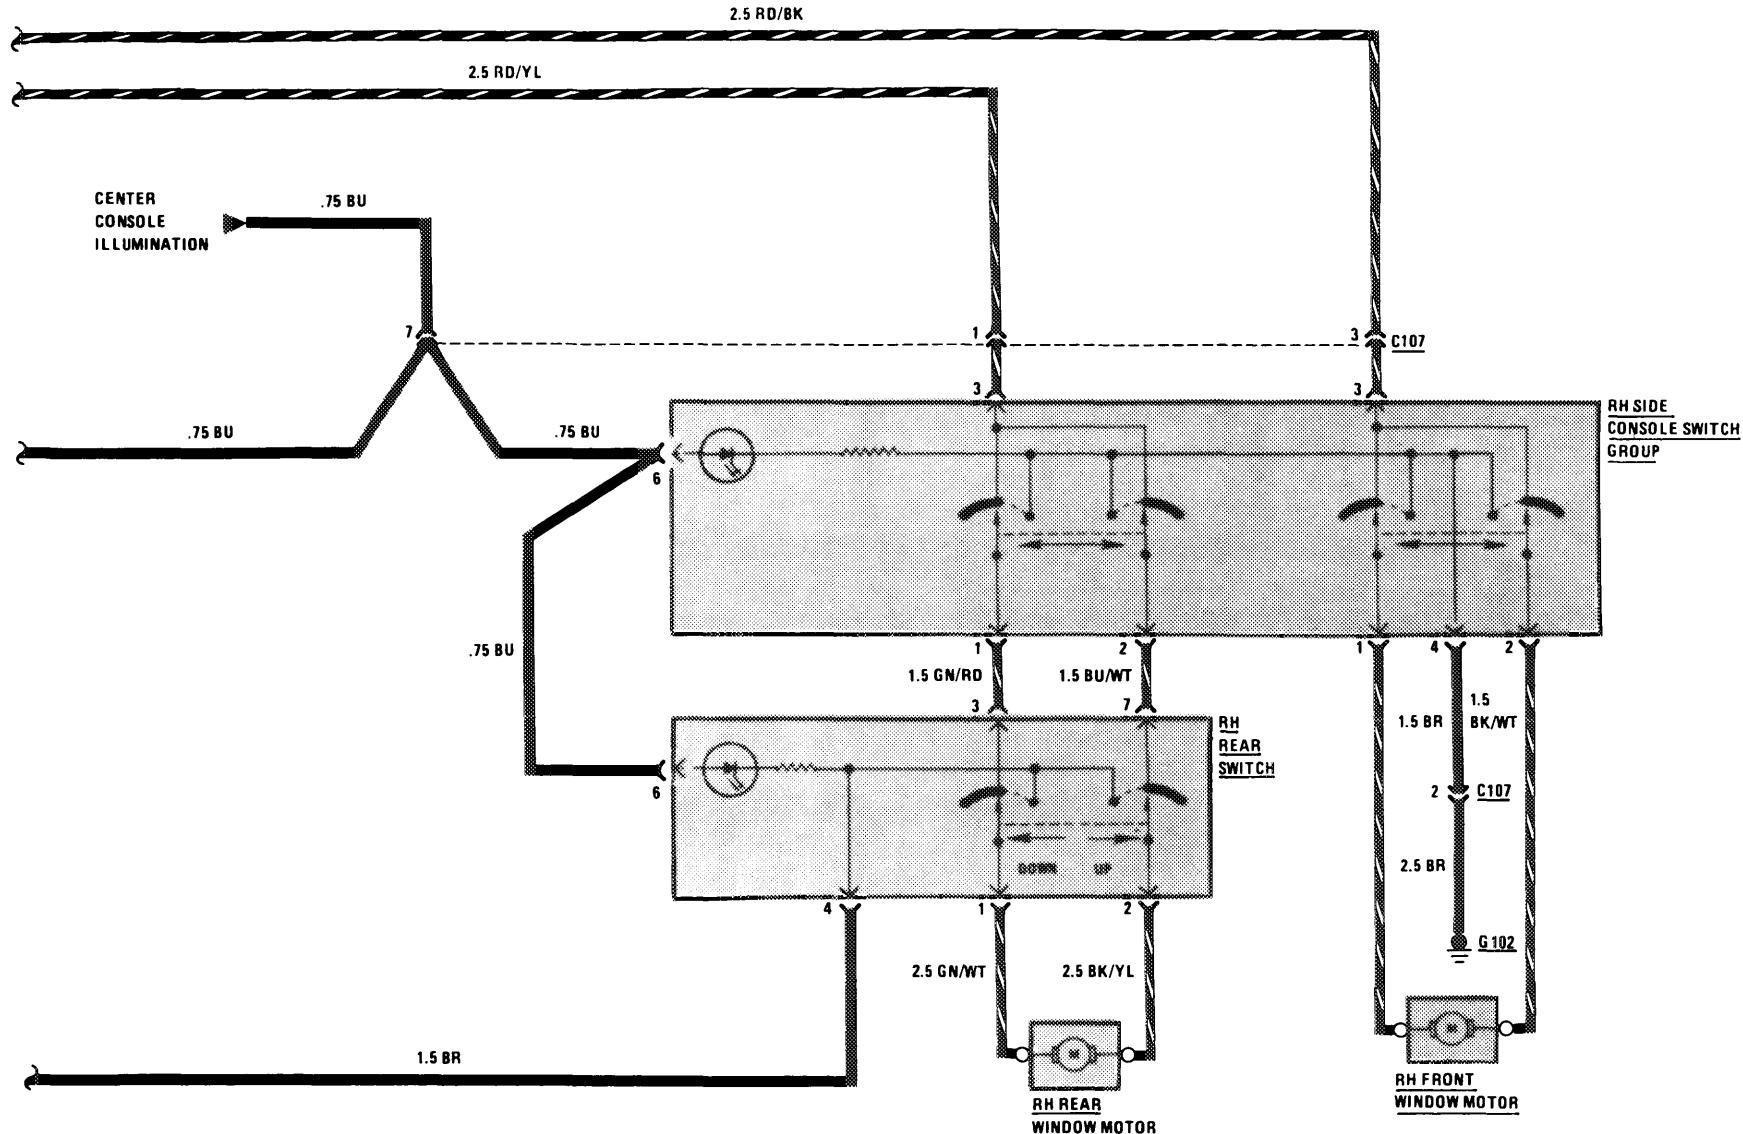

## REVISIONS:

(For Component Locations See Page 202)


123.123

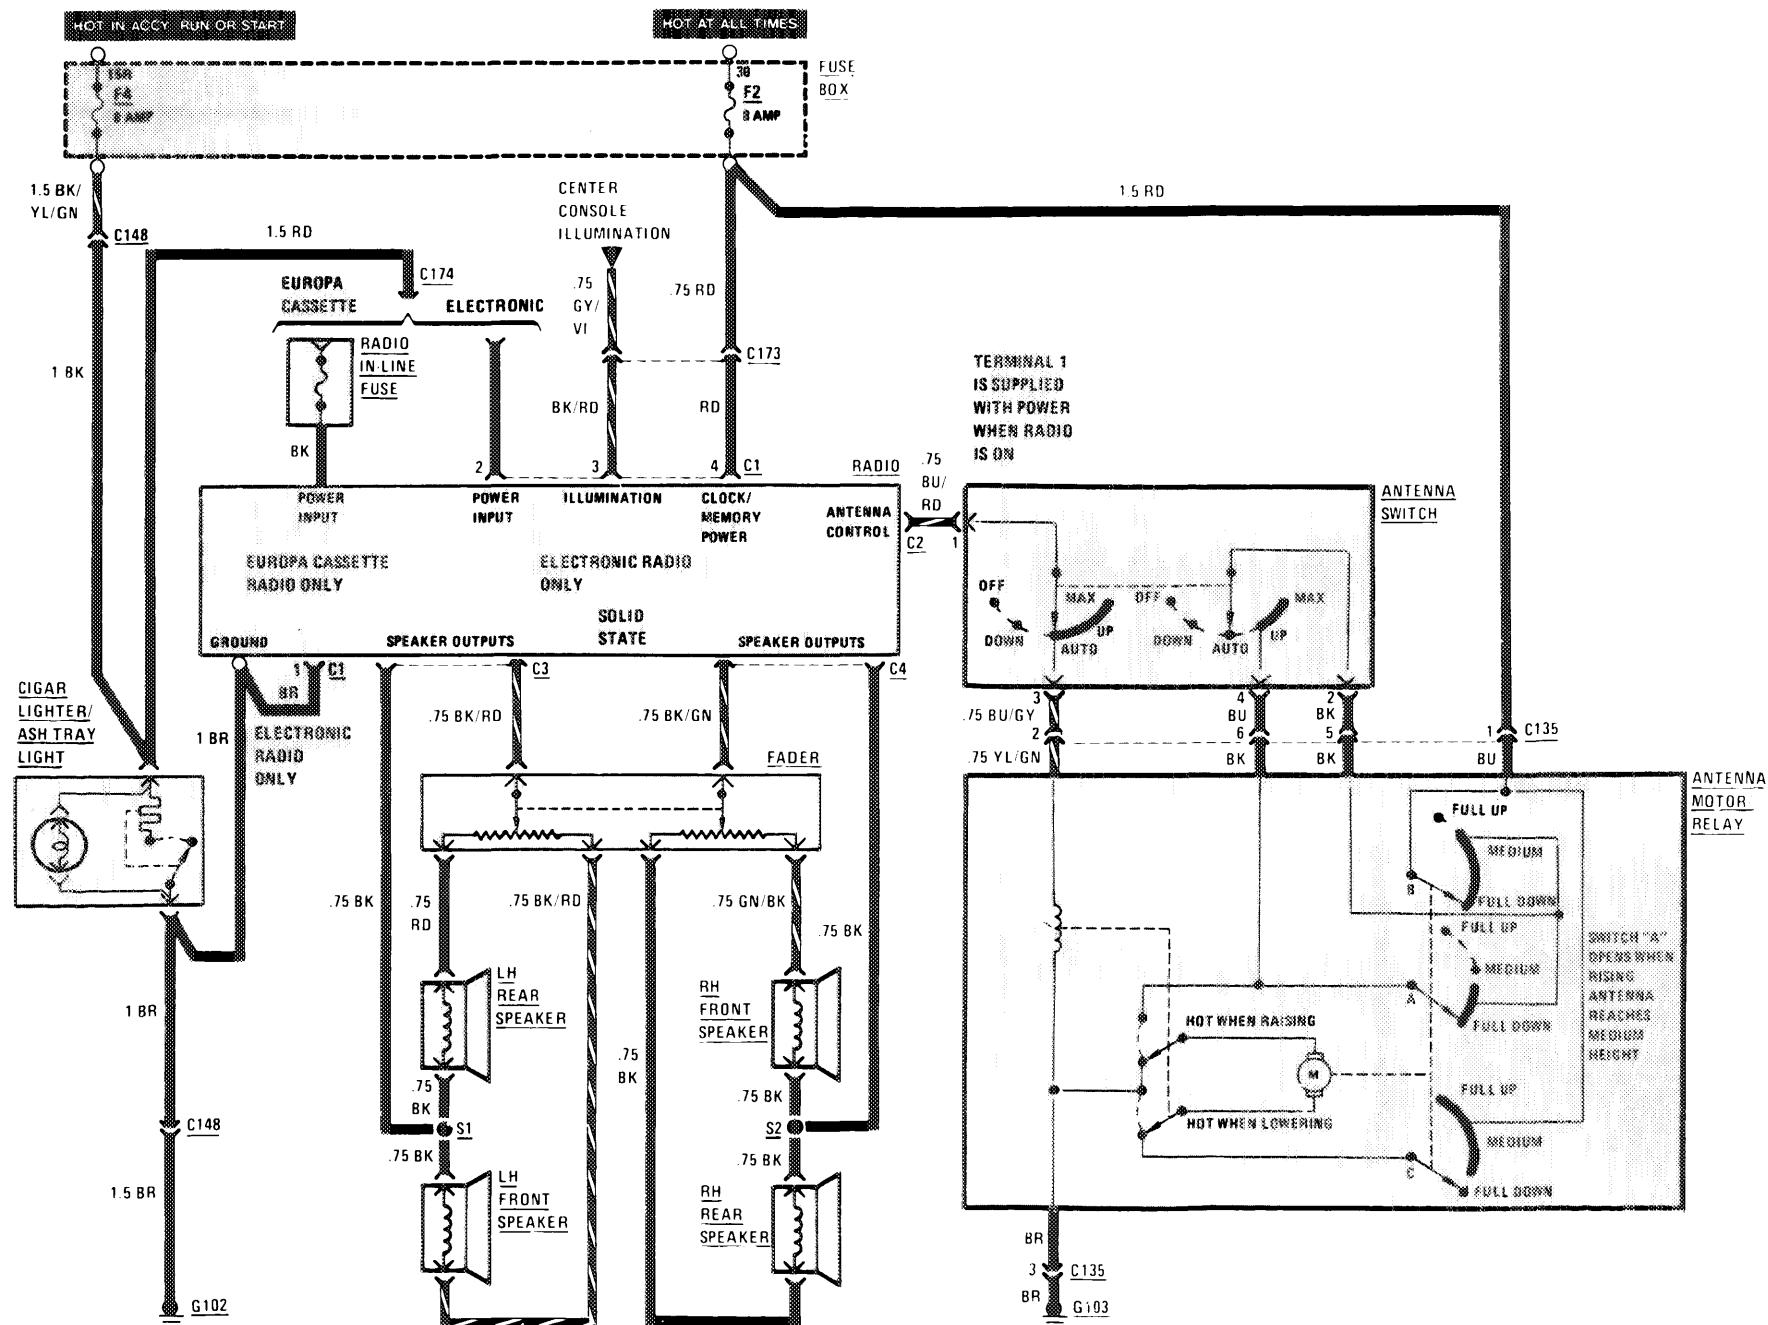

## REVISIONS

## HEATED SEATS


(For Component Locations See Page 203)

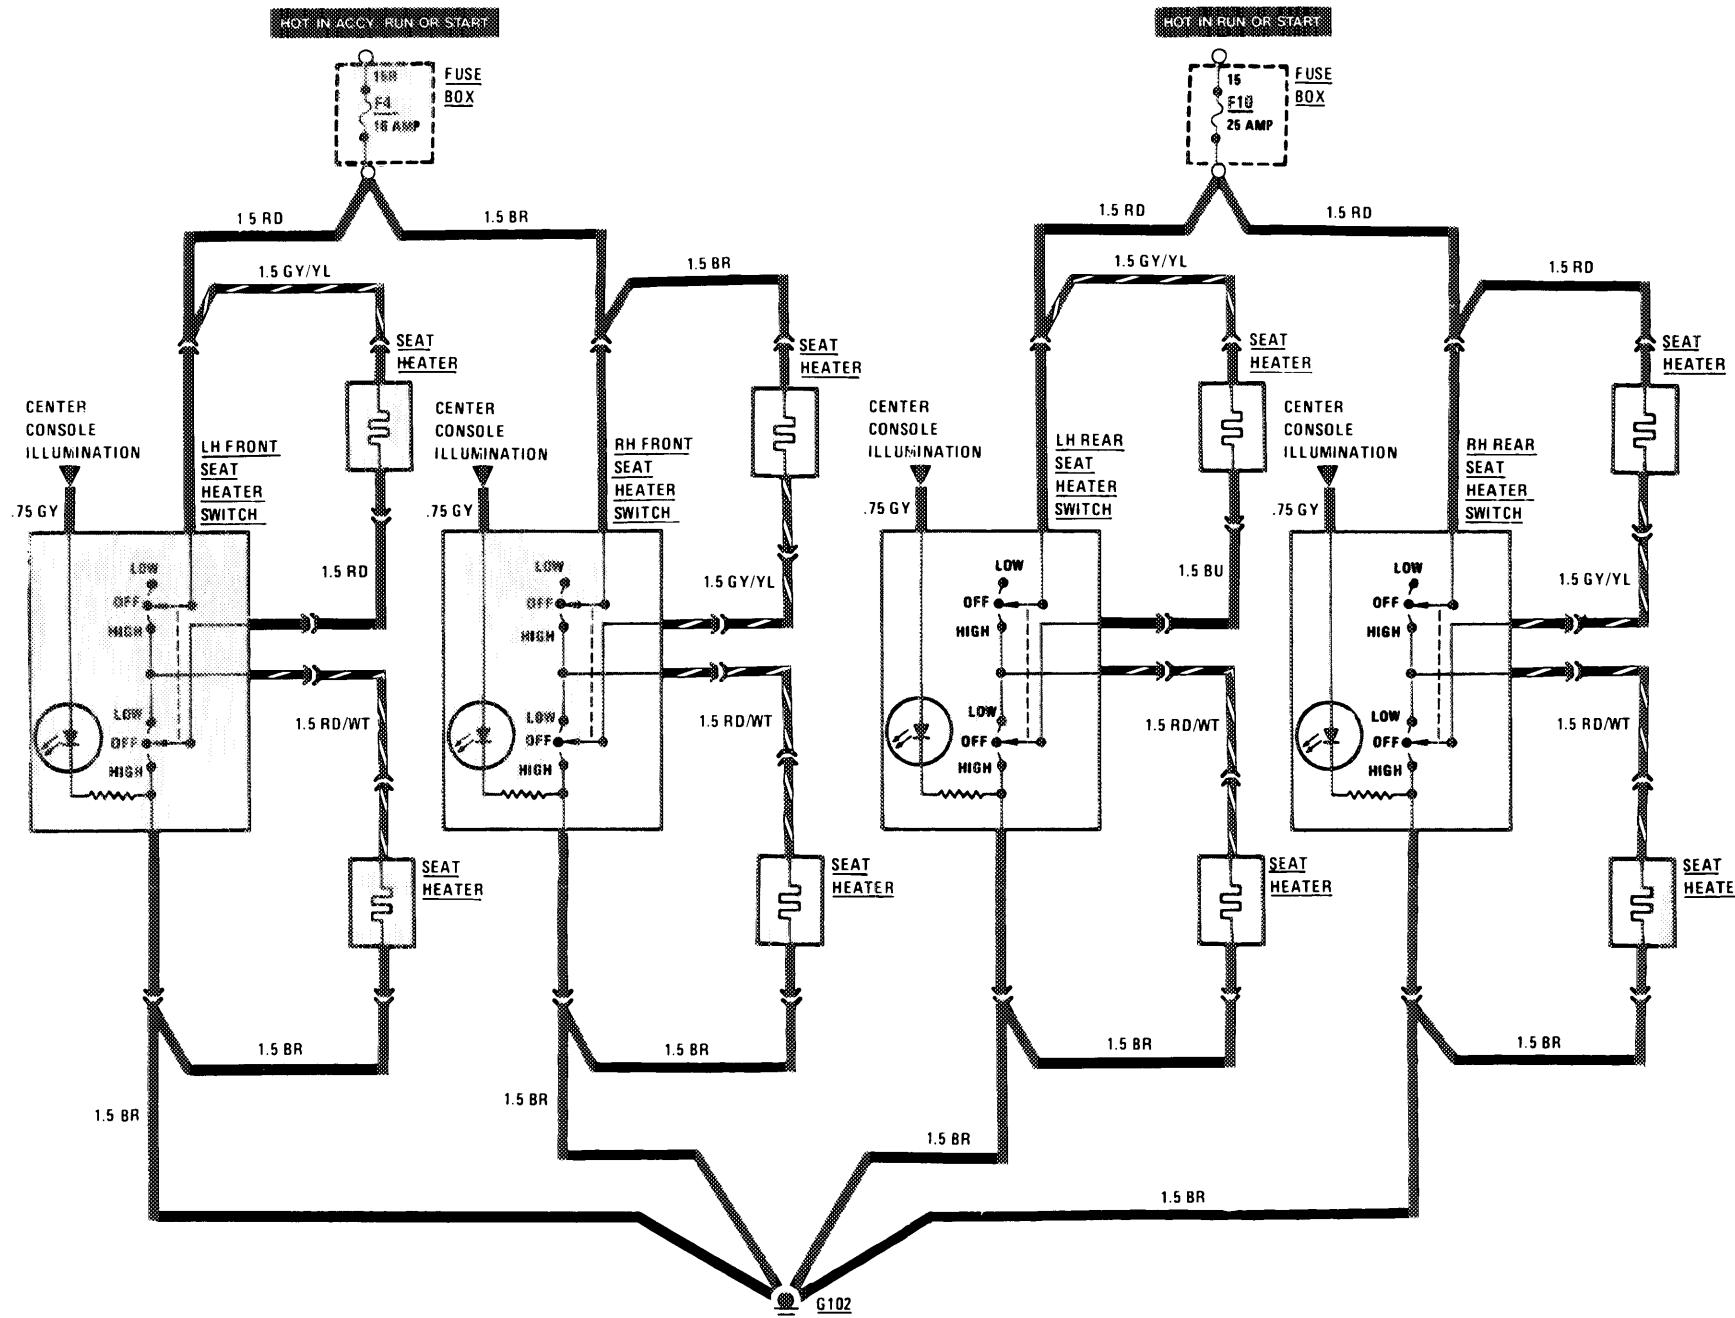


REVISIONS:

# GROUND DISTRIBUTION

132

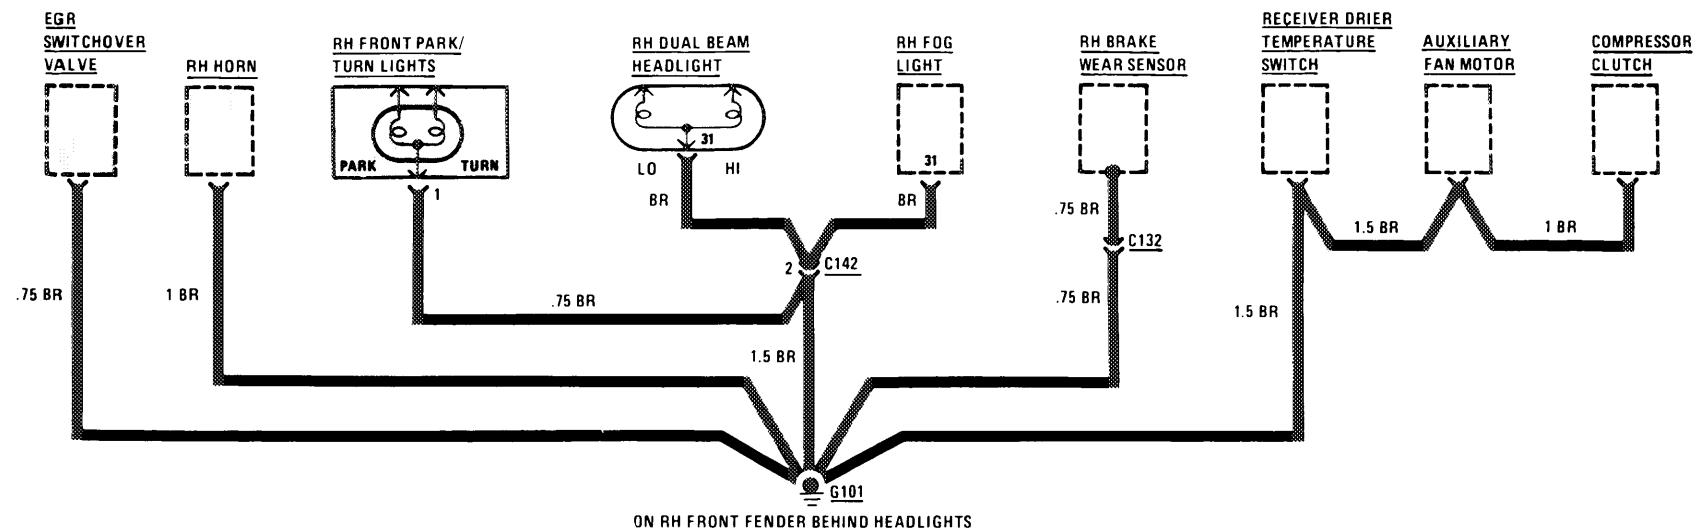


123.123

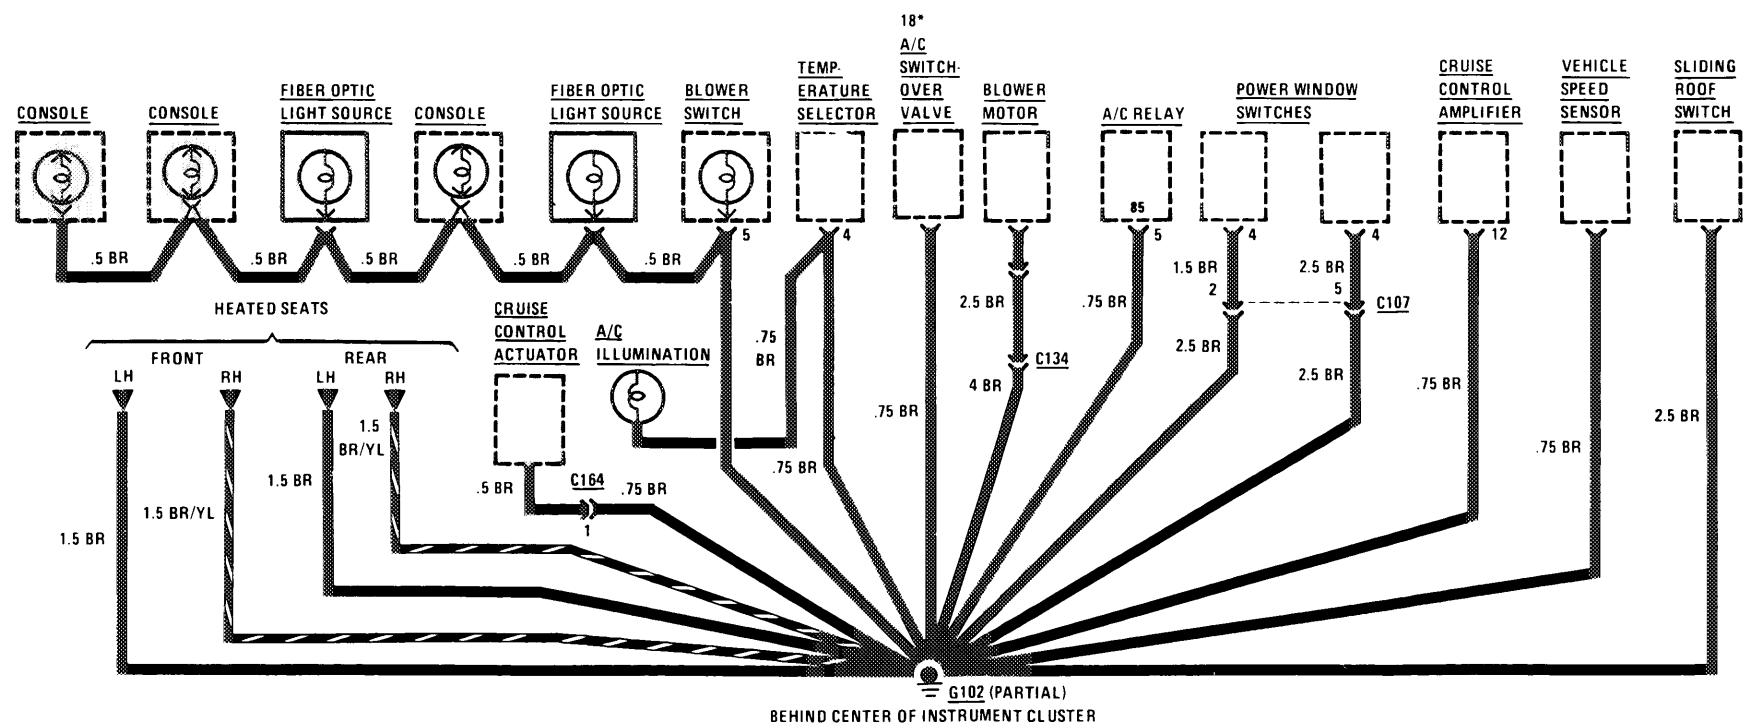


REVISIONS:

2 / 83

## GROUND DISTRIBUTION

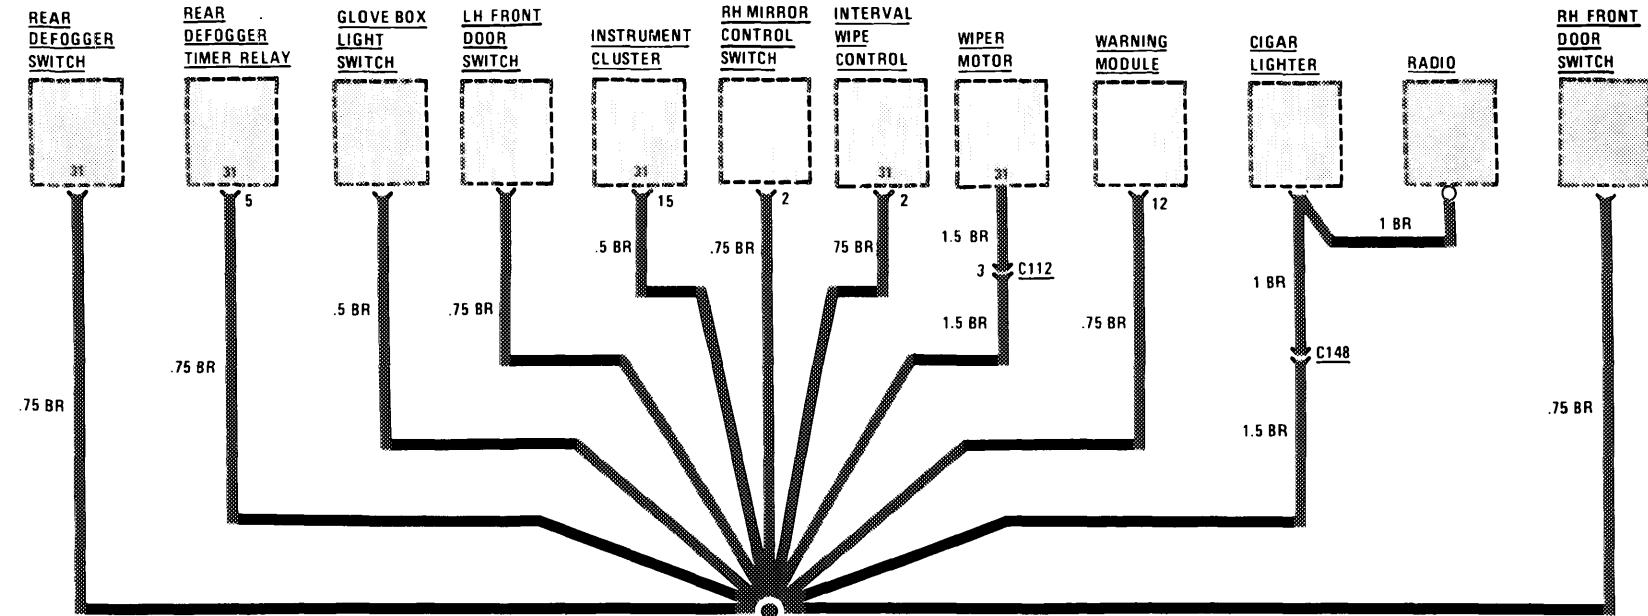


123.123

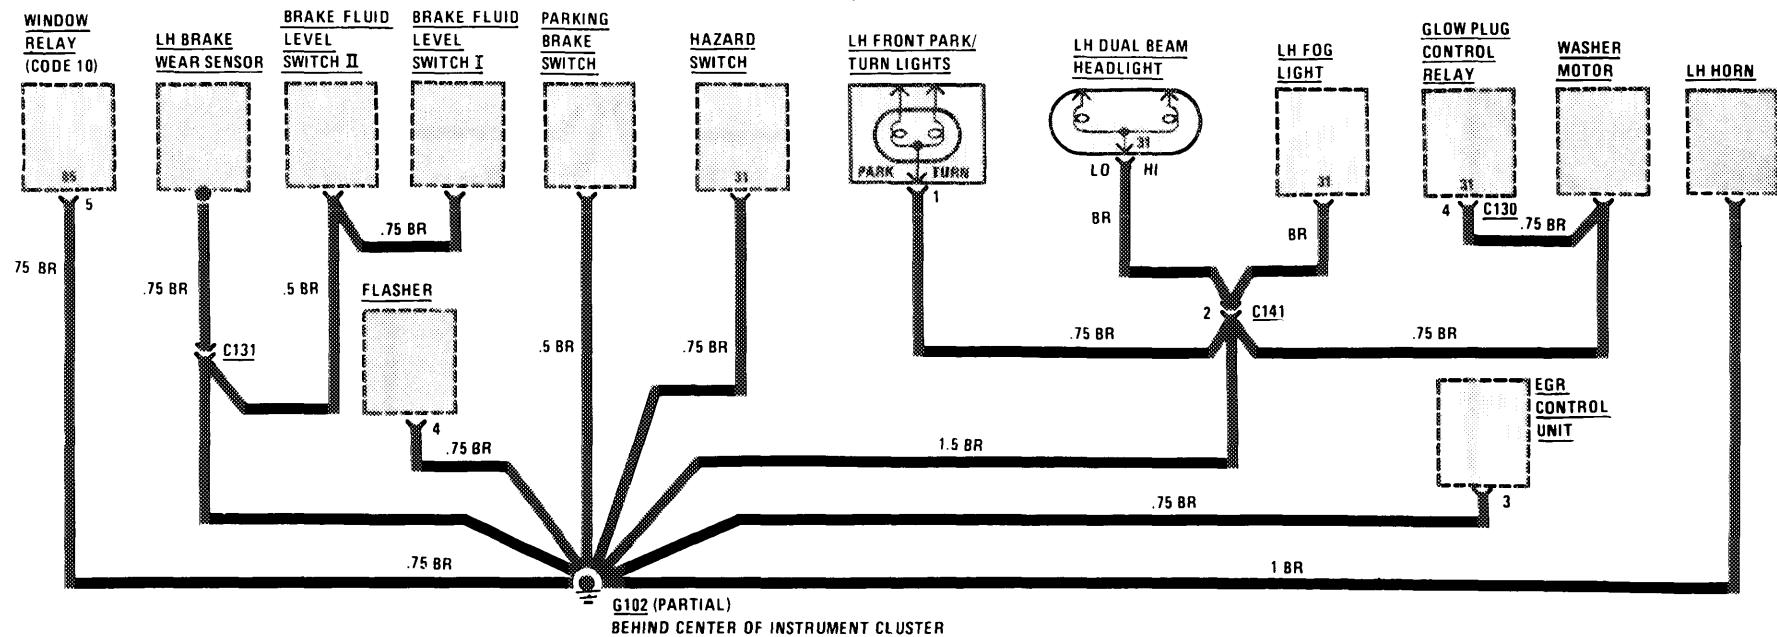

REVISIONS:

## הנחיות ותקנות

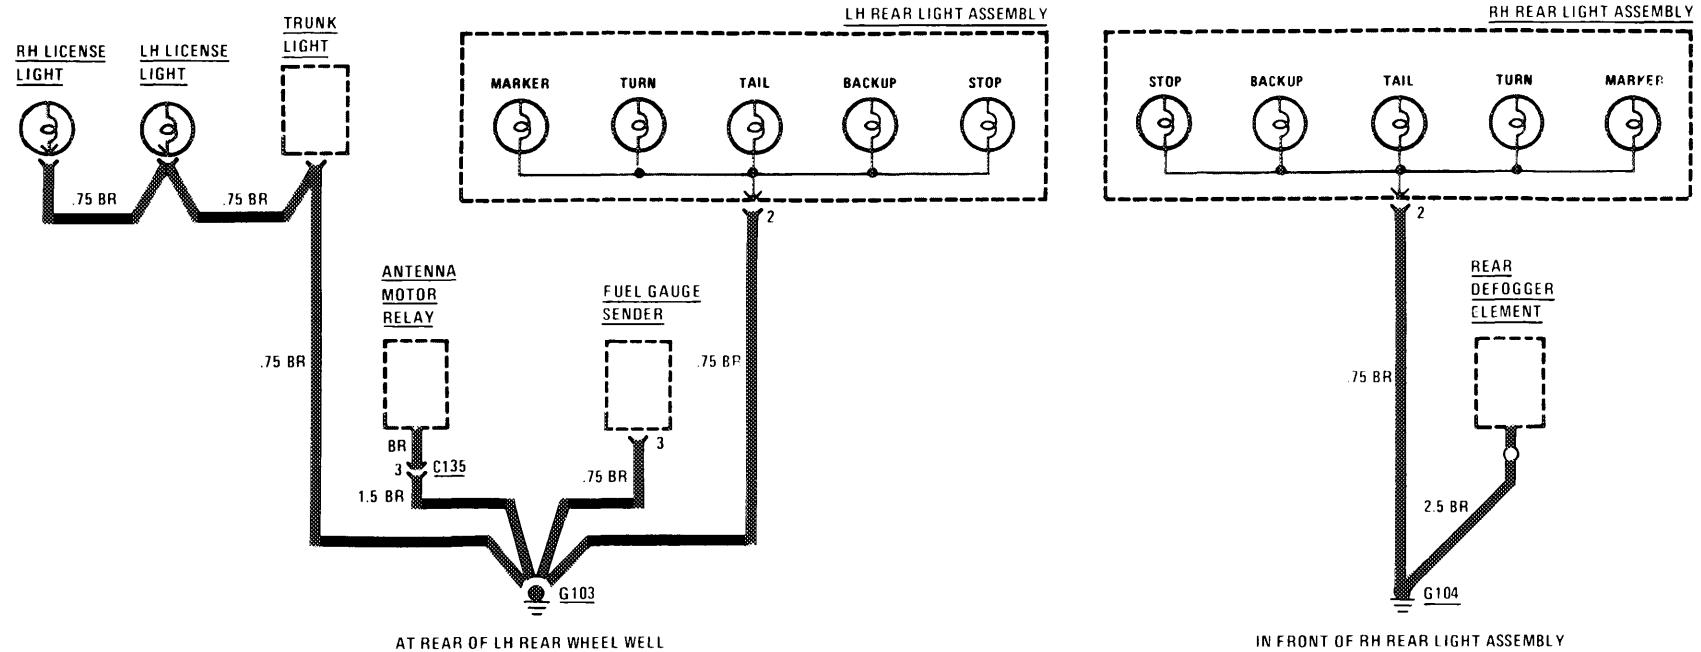

123.123

**REVISIONS:**

2 / 8

## RH OUTSIDE MIRROR

(For Component Locations See Page 210)

